FABRIC PRODUCT CARE



Handling

Always handle fabric in a clean area with clean hands or gloves.

Removing Wrinkles

Most wrinkles disappear within 24 hours of installation. A steamer can be used if needed. Do not iron.

Packing & Storing

Fold face inward and roll or loosely fold. Store in a cool, dry area 40° - 80° F. Ensure fabric is clean and dry before packing. Fabrics shipped rolled should be stored rolled.

Stain Care

Many stains can be removed if treated promptly via prescribed method below. **Moss Stretch Glow** should not be spot-cleaned. For care on a specific textile, please call Moss.

STAIN	CLEANER	RECOMMENDATION
Dirt	Mr. Clean® Magic Eraser	Use the eraser without water to gently brush fabric, removing surface dirt.
Grease & Oil	Dawn [®] Dish Detergent	Apply small amount of detergent to clean, white, damp cloth and gently blot/rub area from outside of stain inward.
Food & Drink	Shout® Wipes	Gently blot/rub area with wipe from outside of stain inward.
Food & Drink	Tide® To Go Pen	Press tip of Tide® To Go Pen onto stain several times to release cleaning solution. Rub tip gently across stain to remove.

Let us clean if for you!

Moss provides professional cleaning services. Contact us for information.