
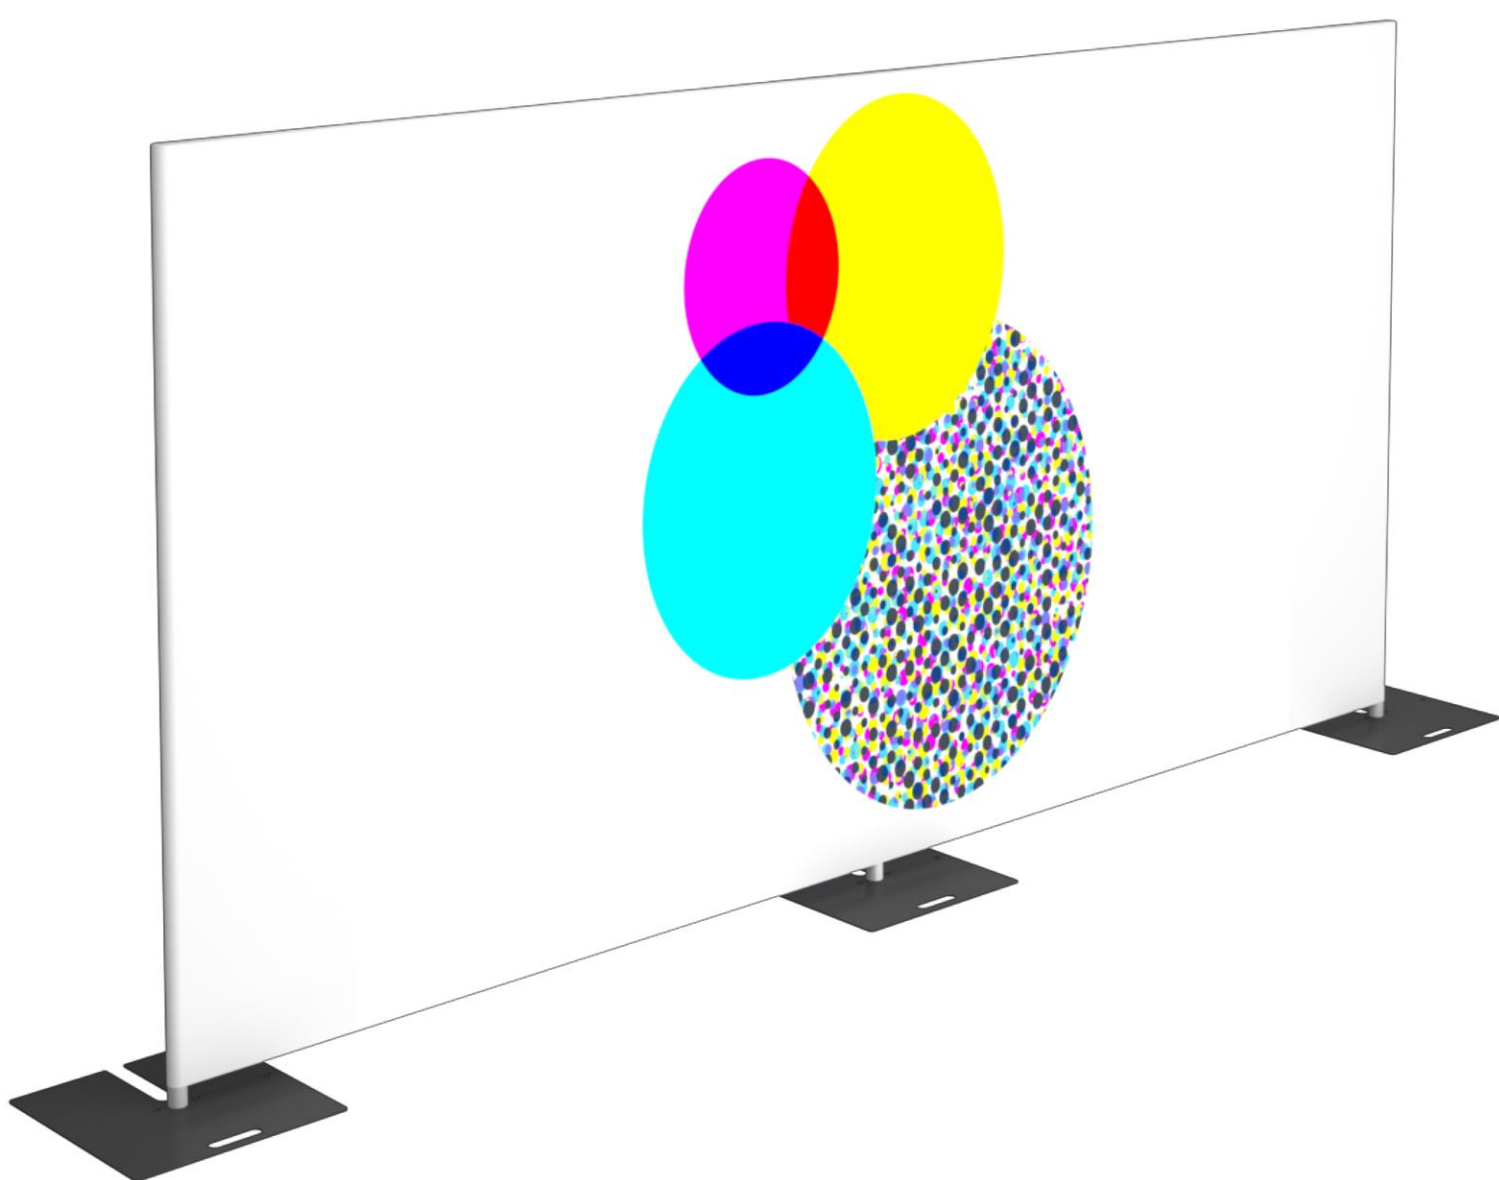


QUICK WALL

DOUBLE-SIDED PRINTED FABRIC COVERS
INSTALLATION & MAINTENANCE GUIDE

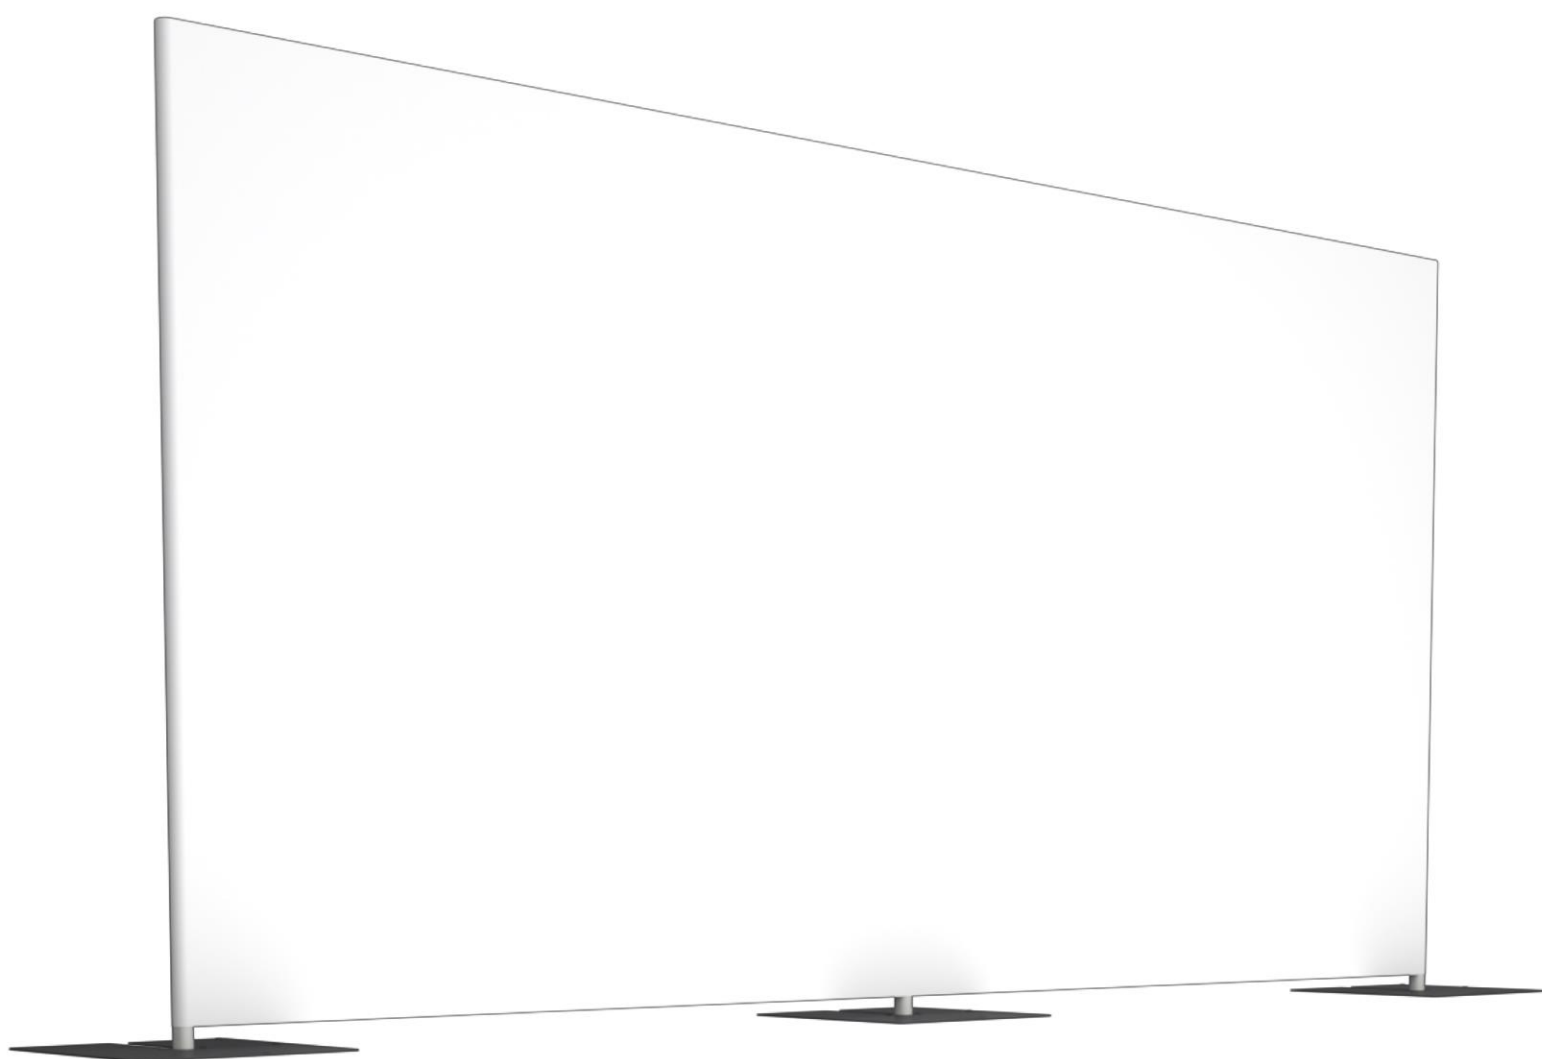

THE FASTEST, MOST VERSATILE SOLUTION FOR TEMPORARY
WALLS AND BACKDROPS

Stretch Shapes

TABLE OF CONTENTS

1.0

Before You Build

1

Proper Fabric Handling

1

Included Parts and Recommended Tools

1

2.0

Product Installation

2 - 15

Lined Pillowcase Quick Walls

2 - 9

Pillowcase Quick Walls

10-15

3.0

Fabric Care

16

Storage notes and methods

16

Cleaning and fabric care

16

Warranty, warnings

16

Install questions?

Contact us. We are here to
help you succeed!

1.888.370.0202


StretchShapes®
SOLUTIONS FROM FABRICS THAT STRETCH

BEFORE YOU BUILD


Proper Fabric Handling

To avoid smudges and dirt buildup on your fabric, always install your product using nitrile gloves. Even clean hands can leave an oily residue on the fabric surface that attracts dirt and dust. Additionally, consider using drop cloths or plastic sheeting on the floor to maintain a clean working environment free of debris.

Included in the Bag

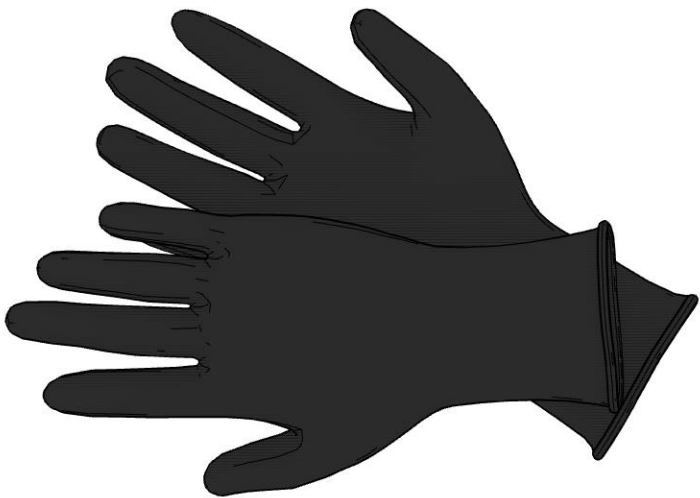


Nitrile Gloves

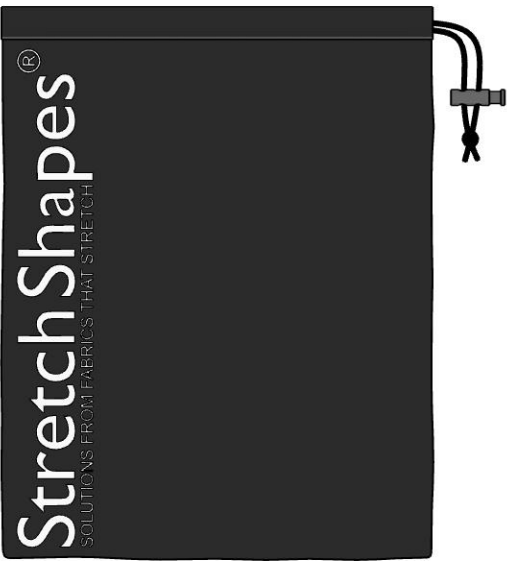


Storage Bag


Recommended Tools

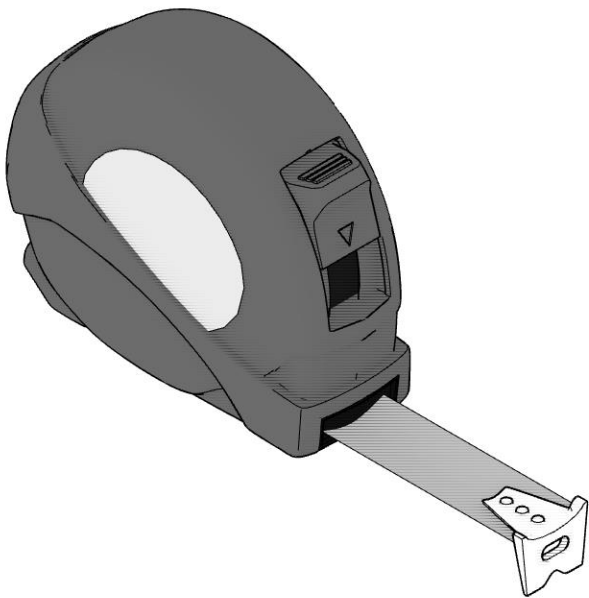

Tape Measure

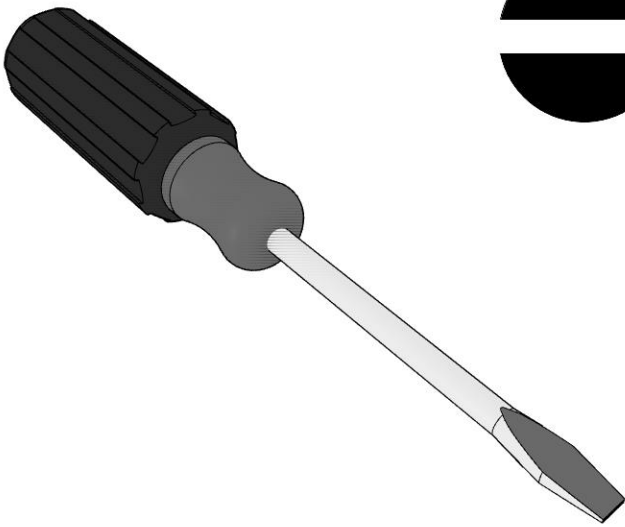

Flat Head Driver

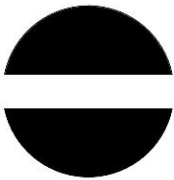

PRODUCT INSTALLATION


Double-sided Printed with LINER

1

Establish a clean working environment. Consider using drop cloths or plastic sheeting to maintain a debris-free surface.

PRO TIP



Carpeted floors work well for setup

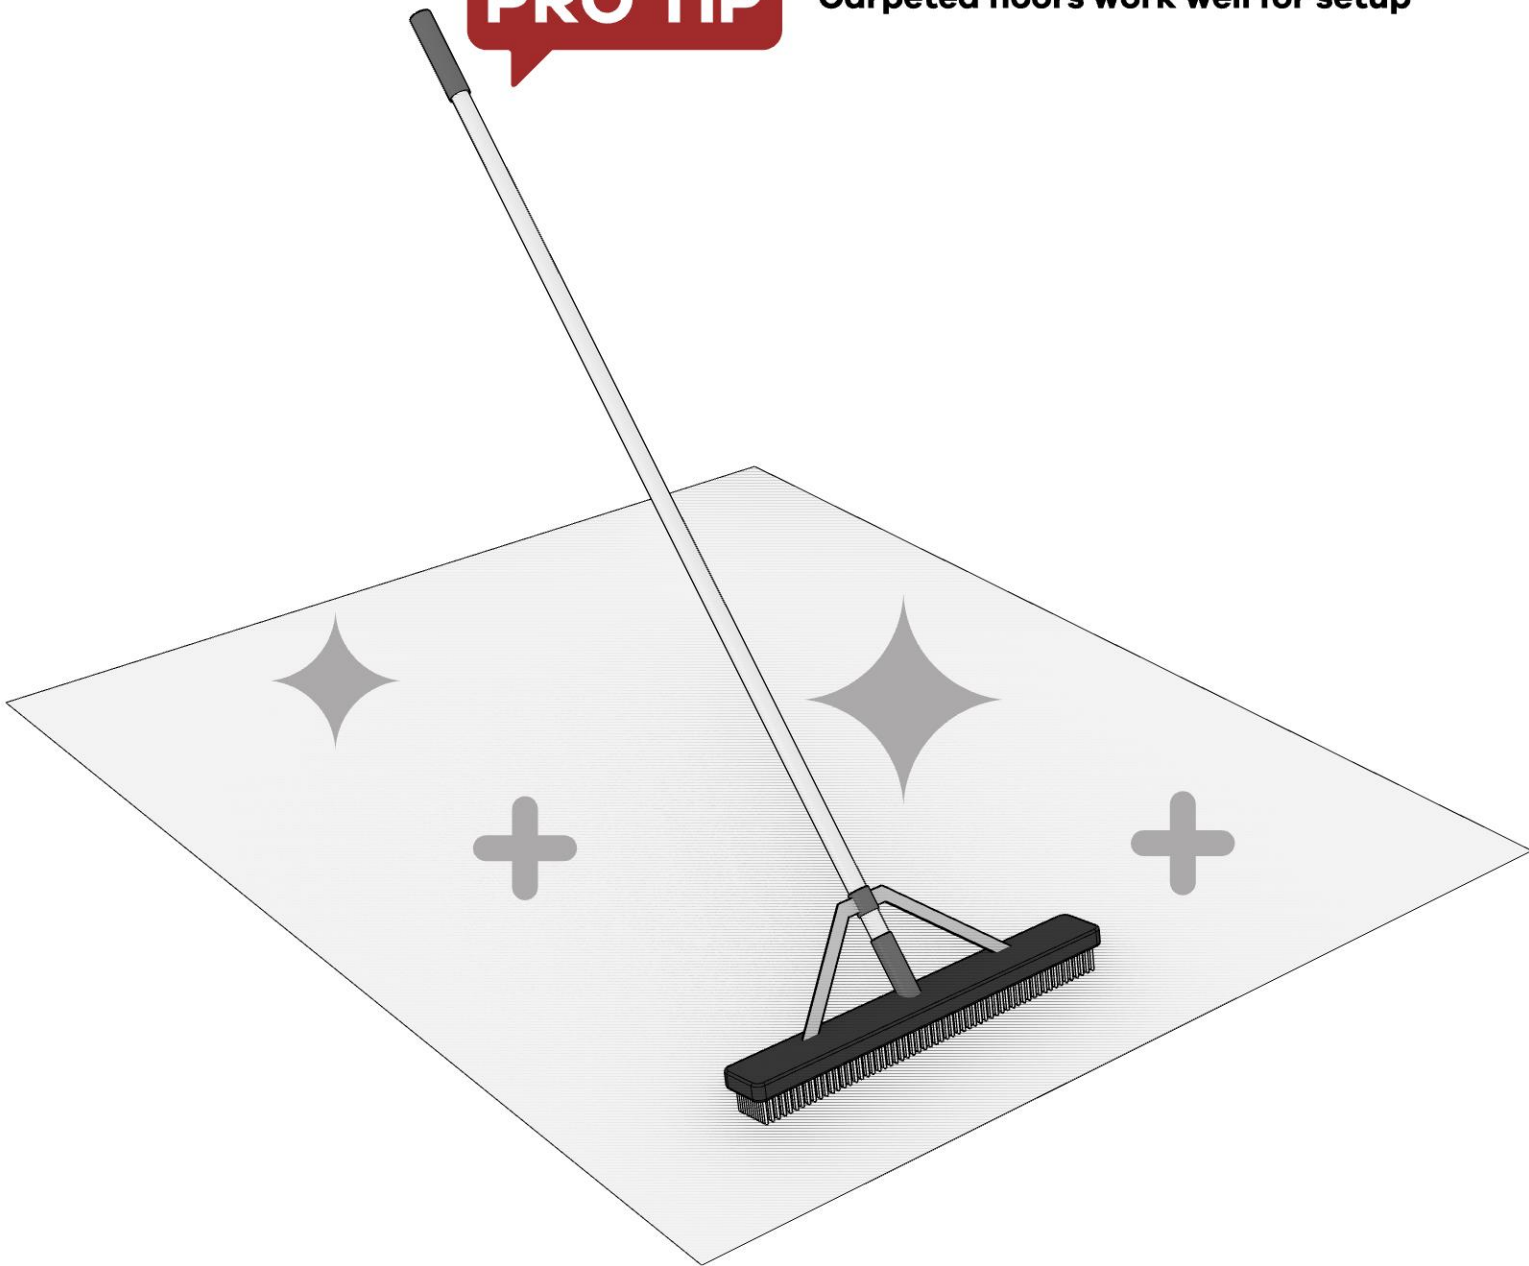


2

Familiarize yourself with parts of your pipe and base kit for your quick wall. **Additional parts are shown on the following page (3).**


Base Plate Assembly

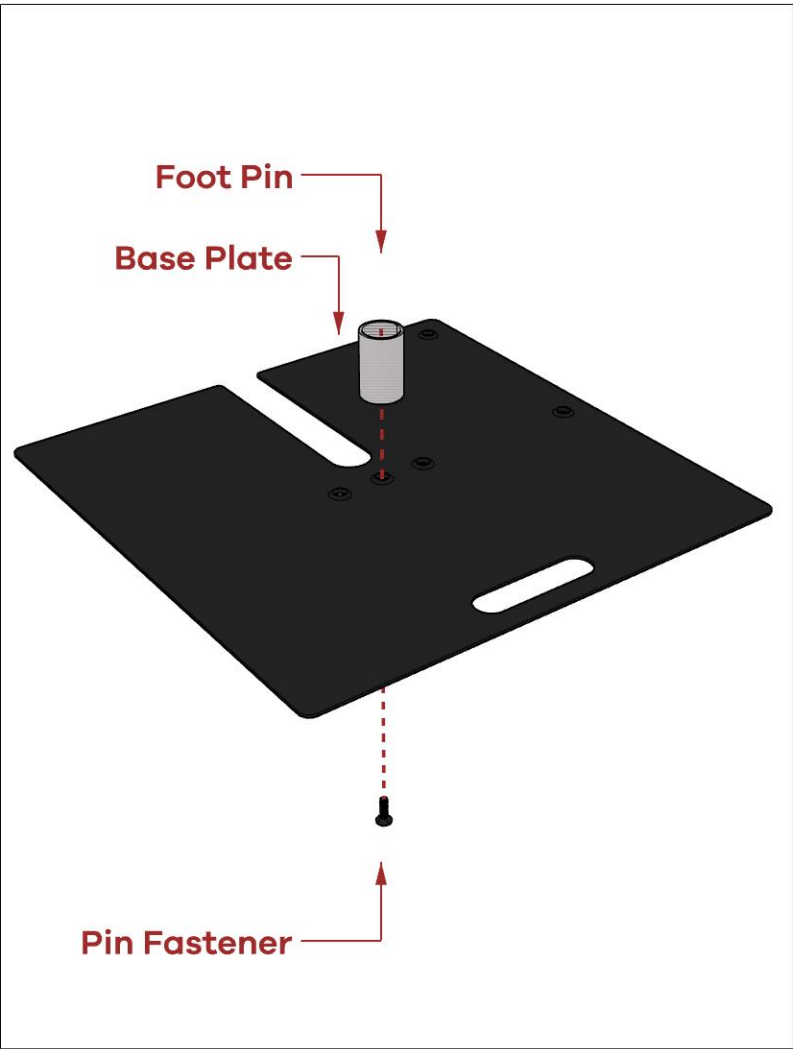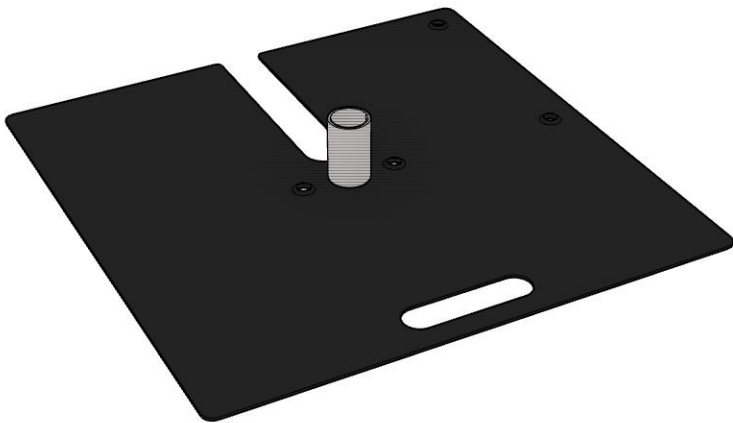

(CONTINUED FROM PAGE 2) Familiarize yourself with the parts of your pipe and base kit.

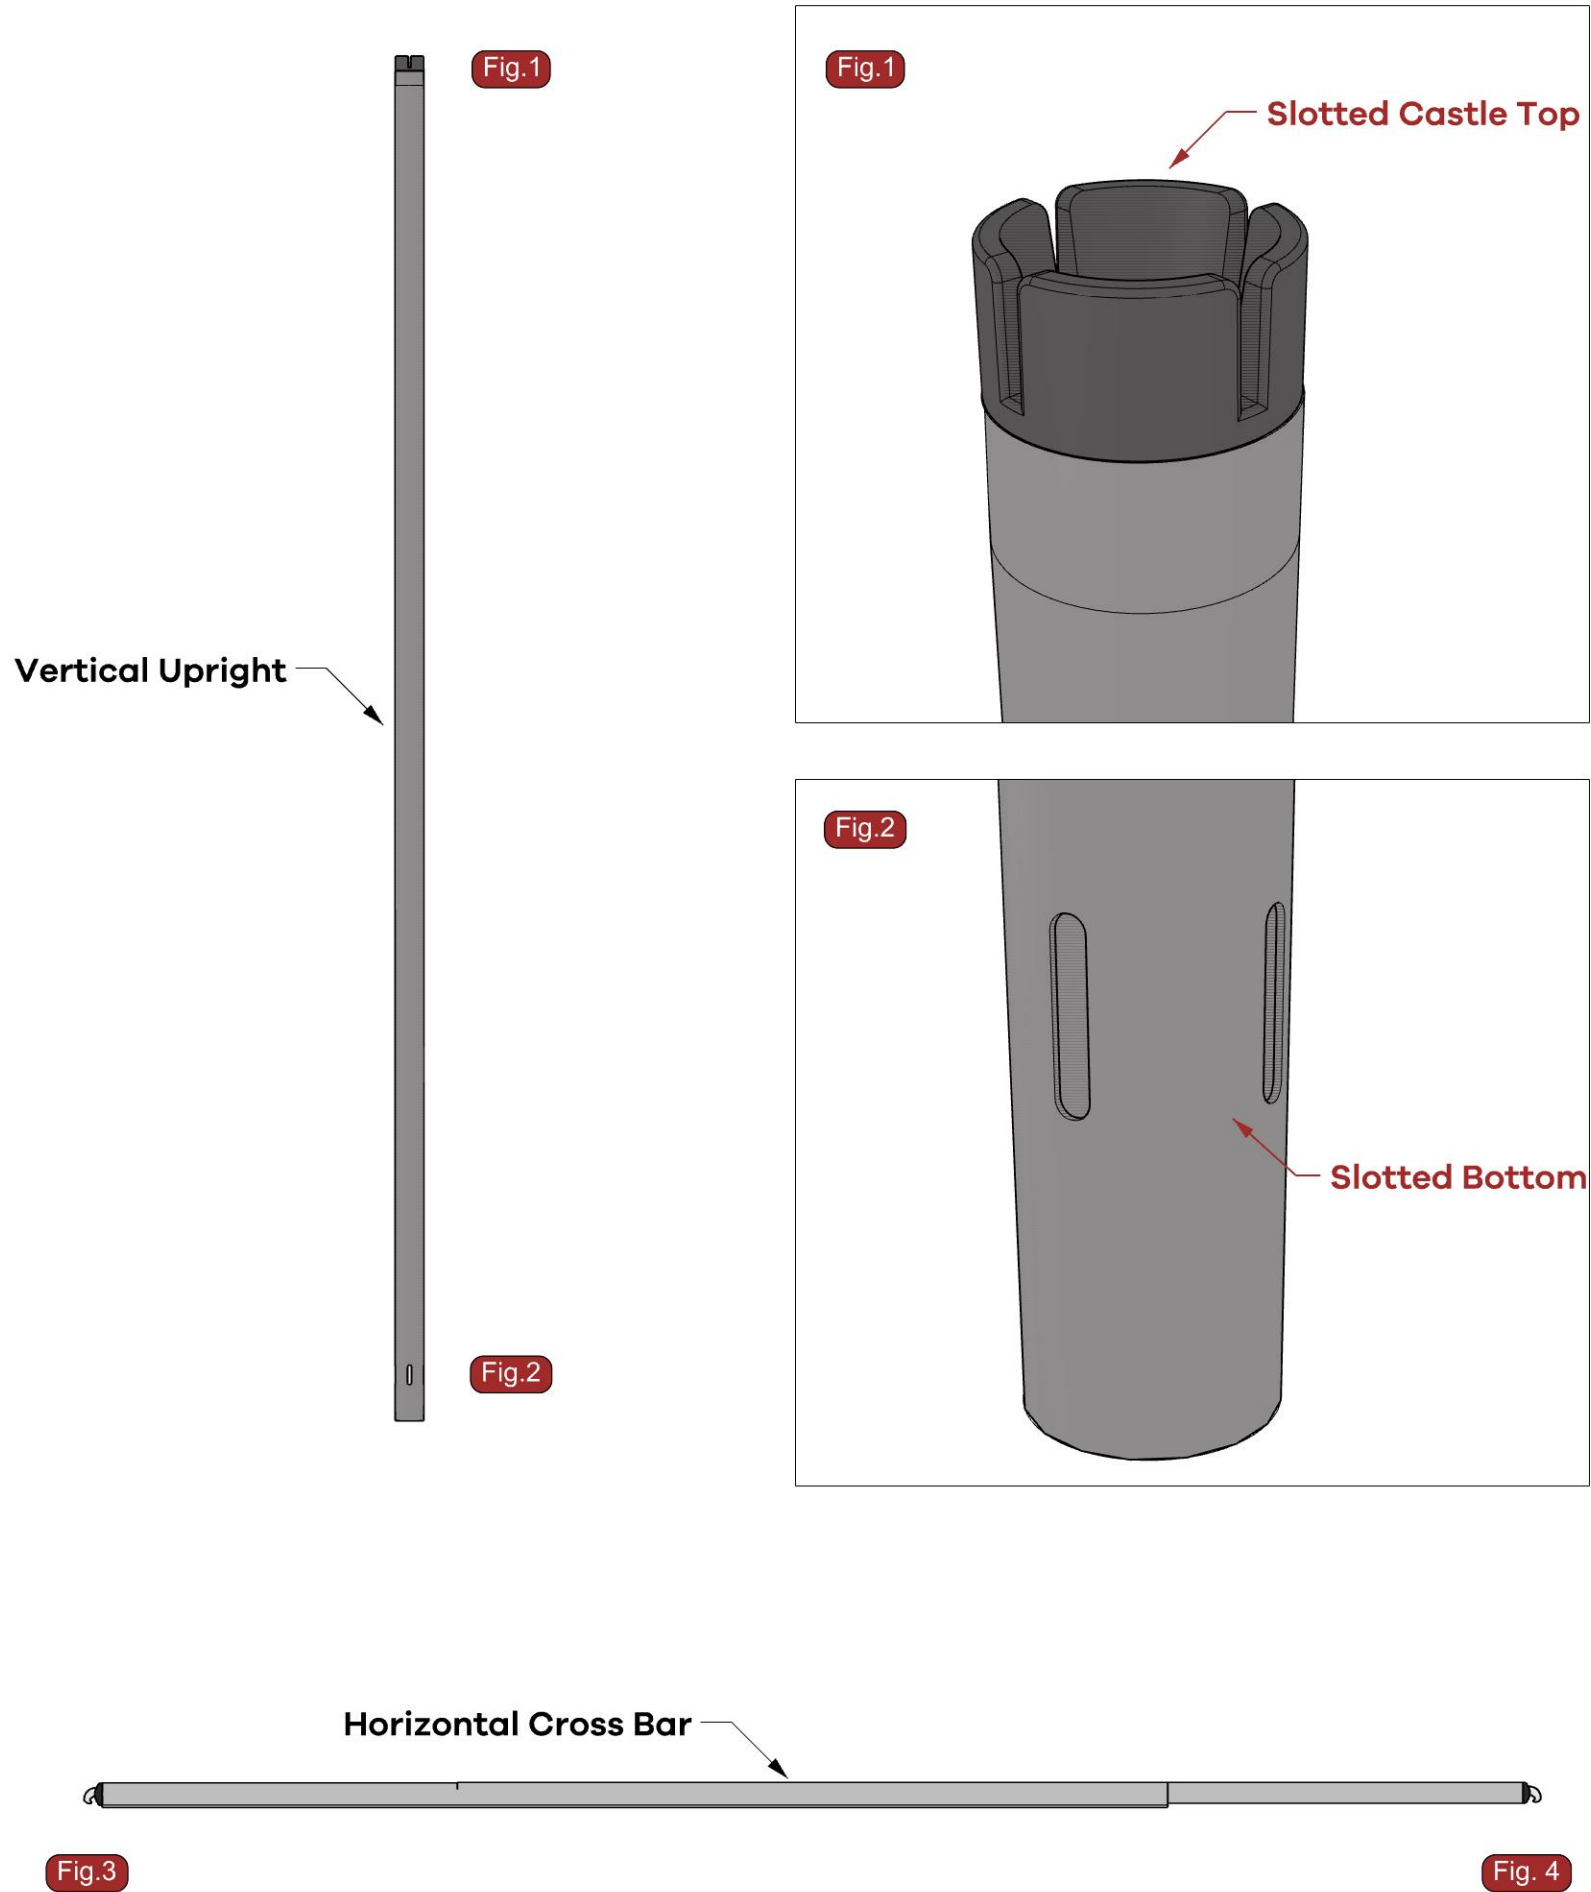

Cross bars use a button stop system to adjust their widths to the desired size. Make sure that your cross bars are set to the correct width before installing the frame and fabric assembly.

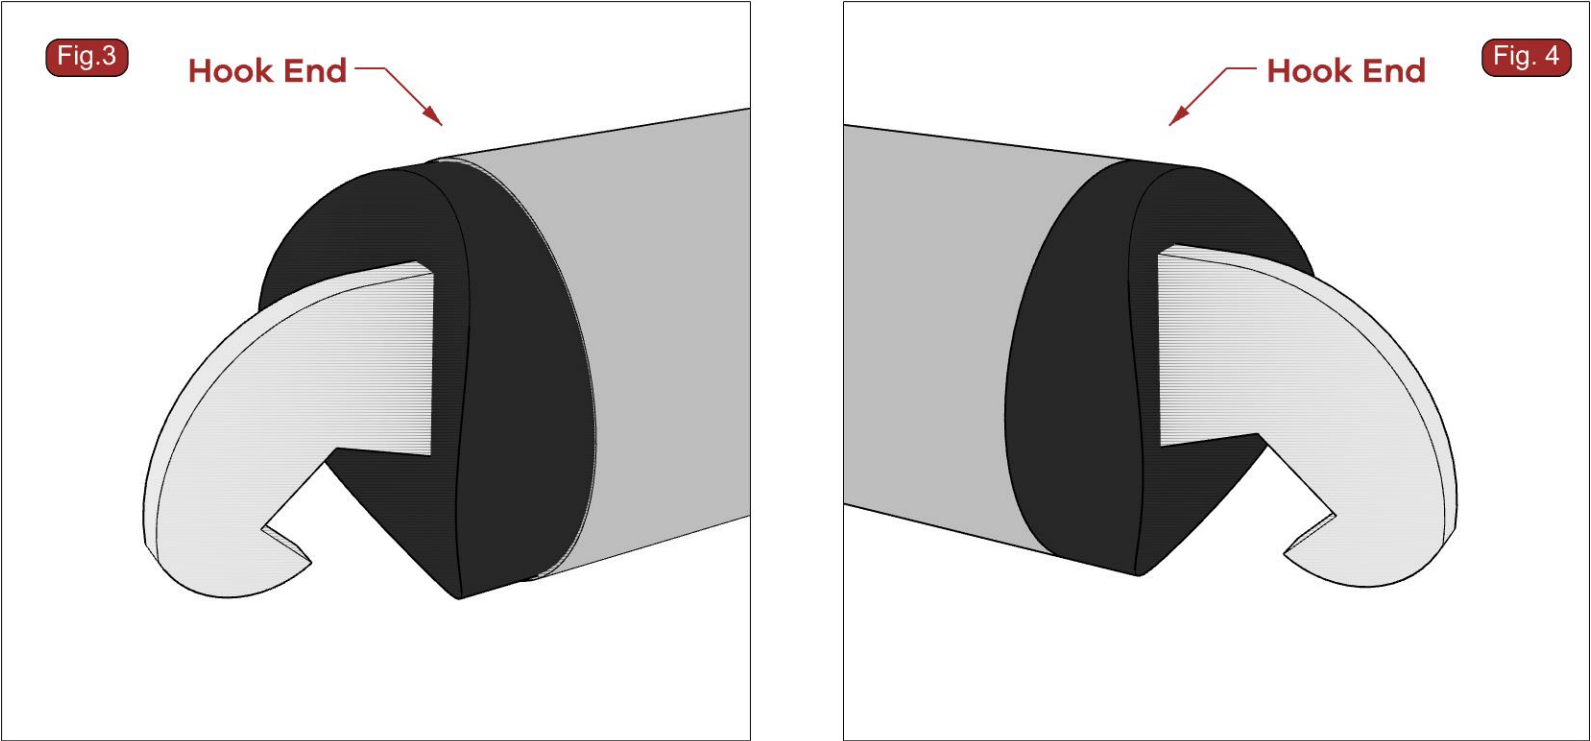




3

If your quick wall comes with a liner, lay the liner out on a clean working surface. **Make sure that the seams are facing up.**




4

If your quick wall frame will have more than 2 uprights, **apply the provided pipe covers to all internal uprights before you assemble the frame.** An example frame is shown below.

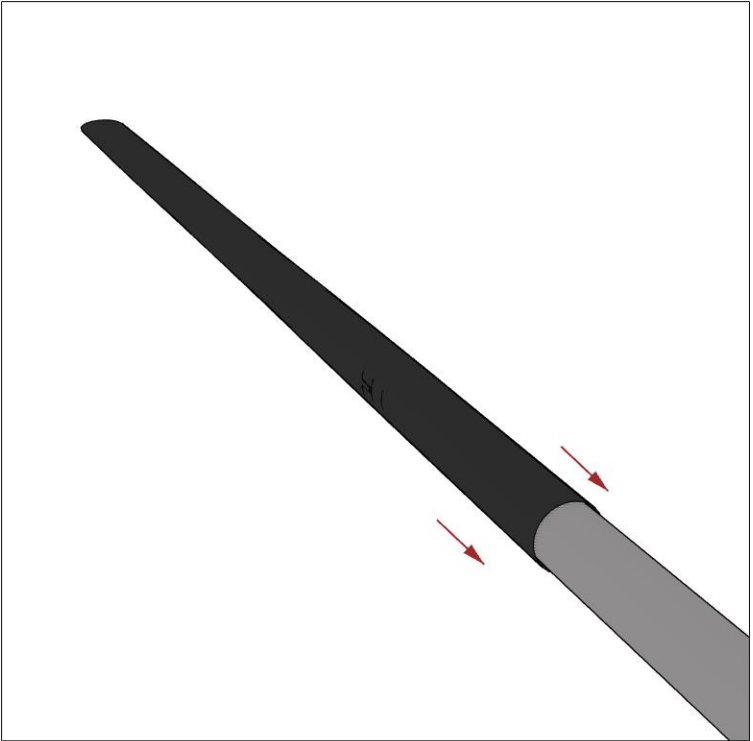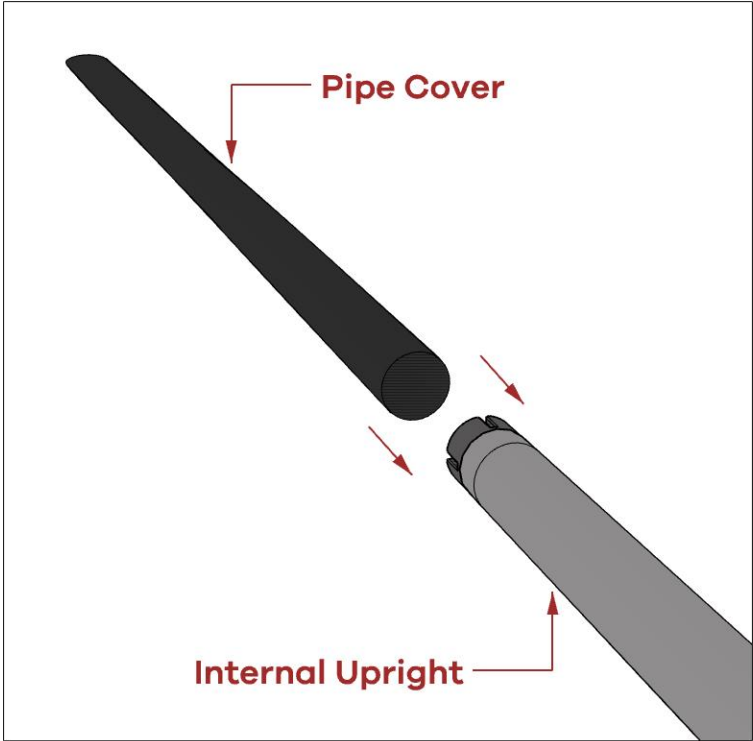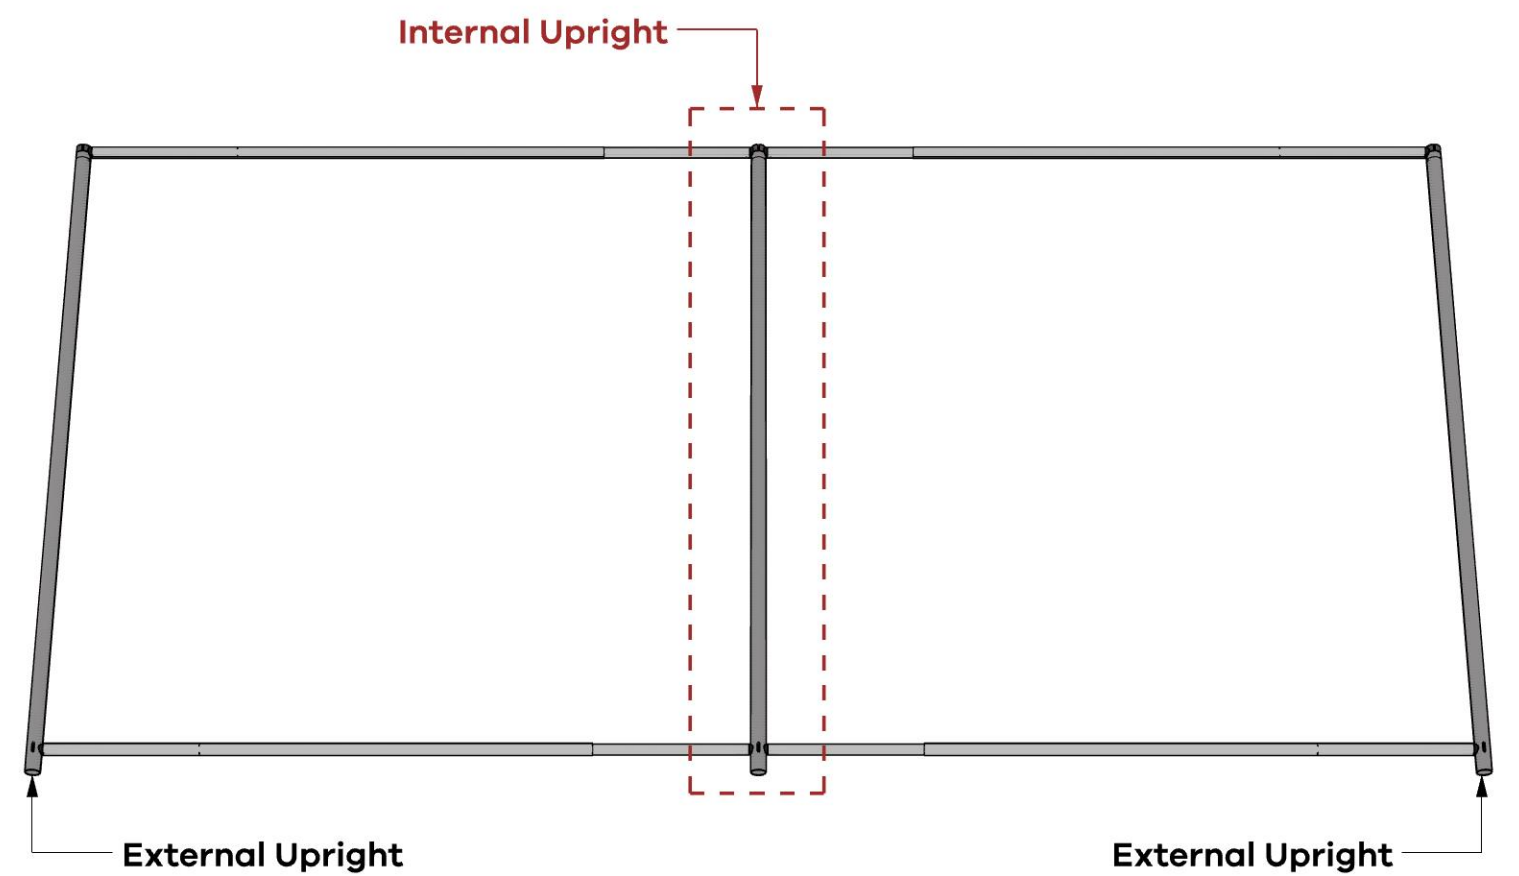

5


Insert the cross bars in to the pole pockets at the top and bottom of the fabric skin. **Ensure that your cross bars are the correct length by using the button stop system before you insert them.**

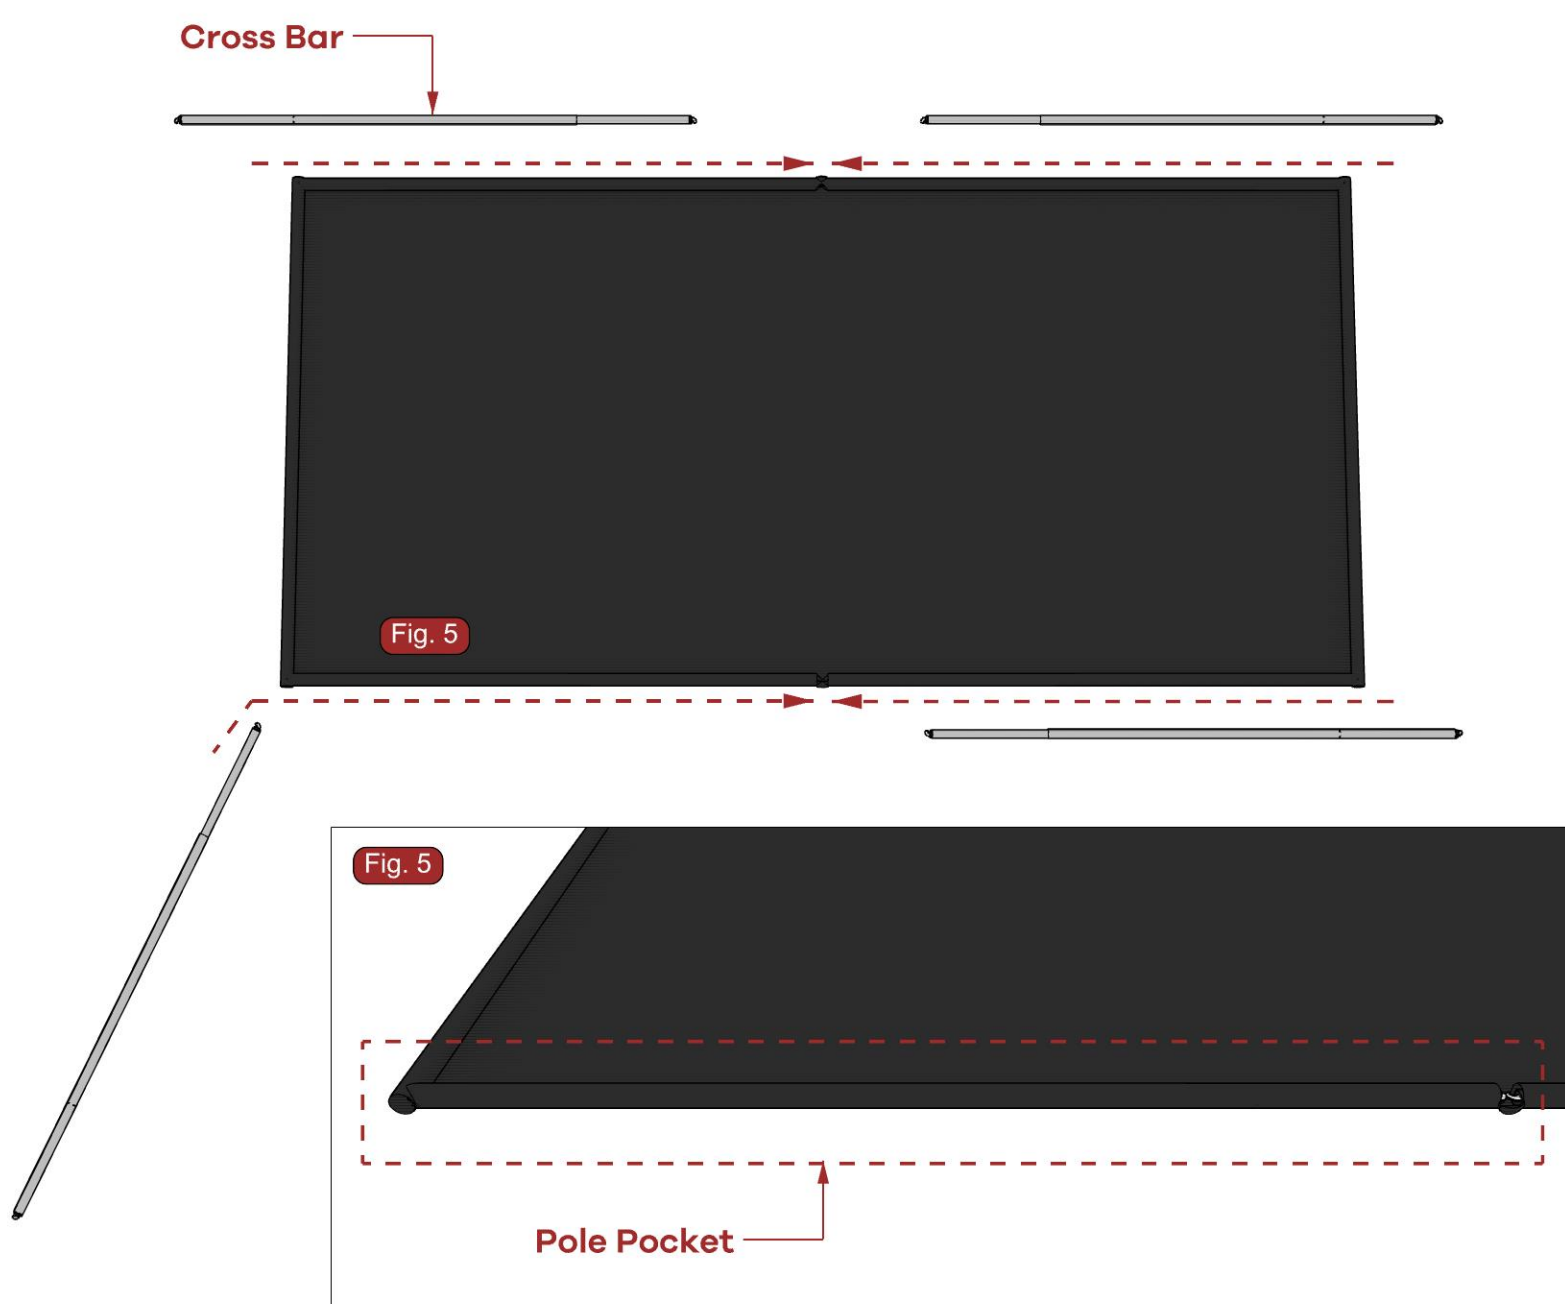

6




Insert the vertical upright poles into the pole pockets.

If your Quick Wall has internal uprights, lay any remaining uprights on the back of the skin near where cross bars meet.

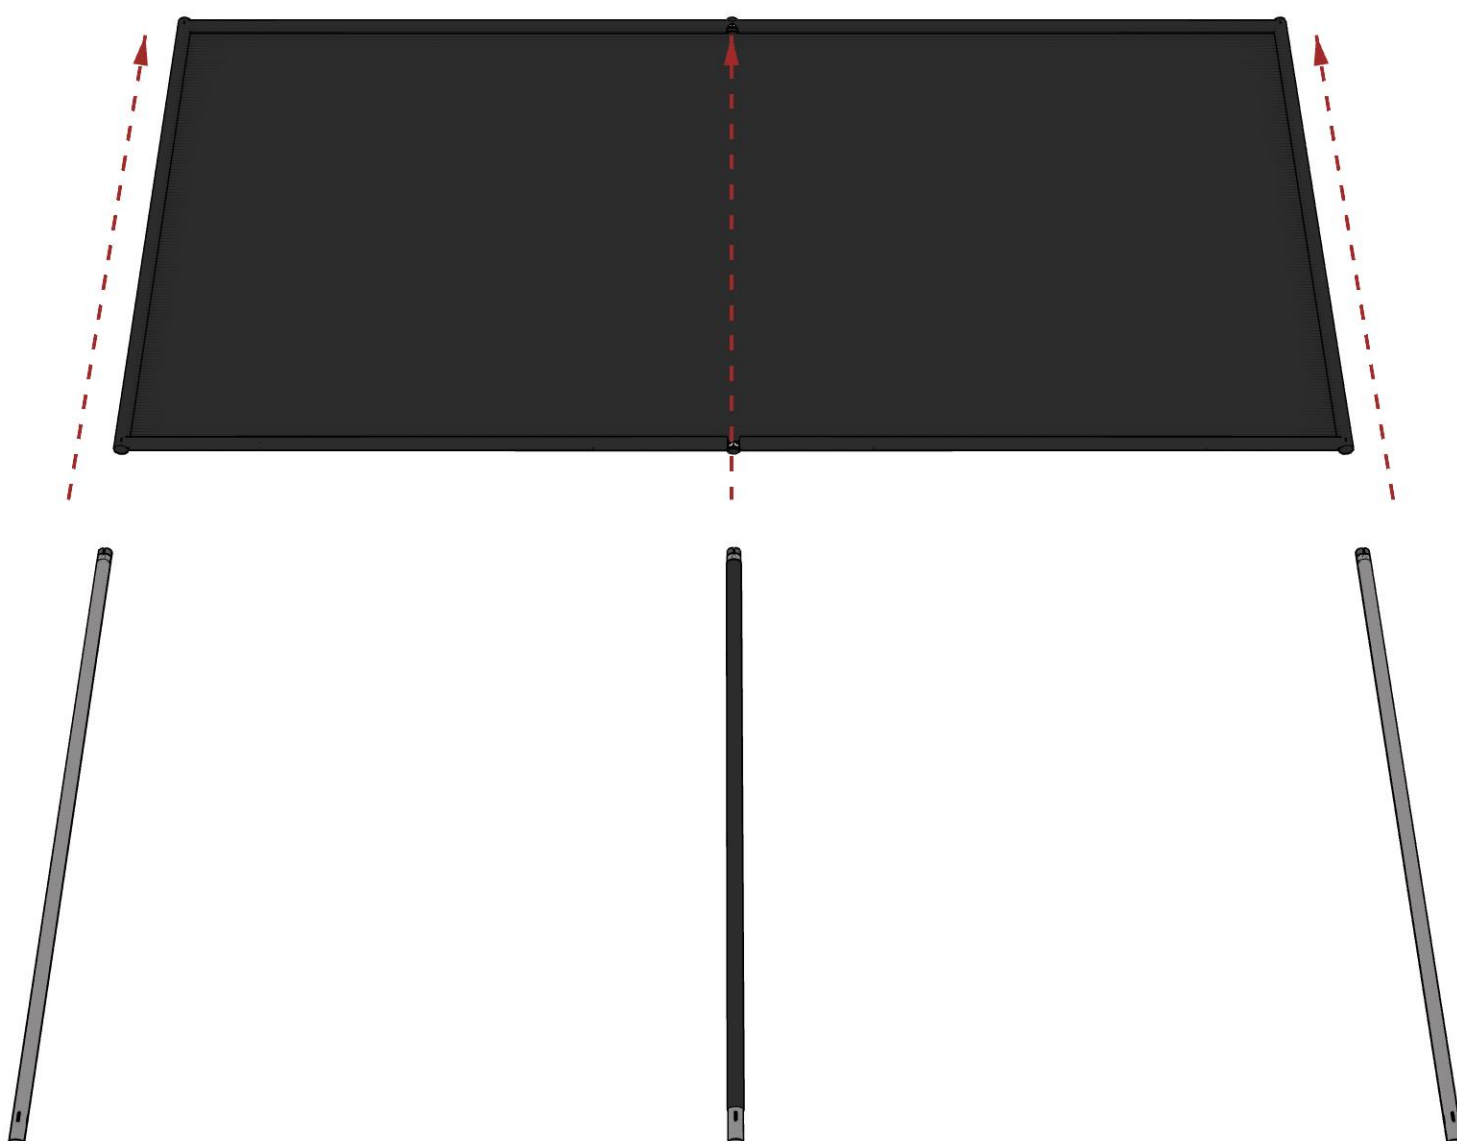




7

Connect your horizontal cross bars to your vertical uprights. Hooks on the ends of horizontal cross bars should be facing away from the outside edge of the quick wall.

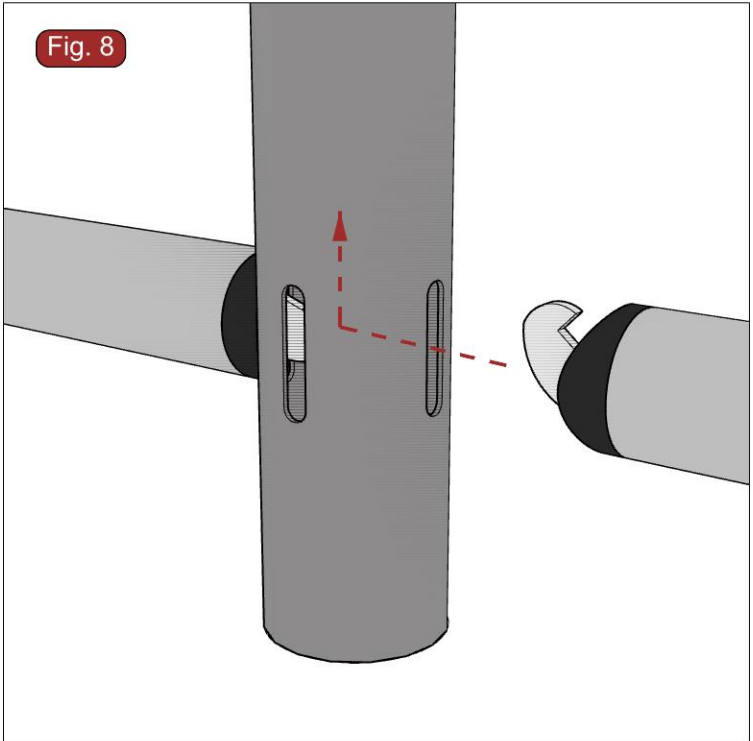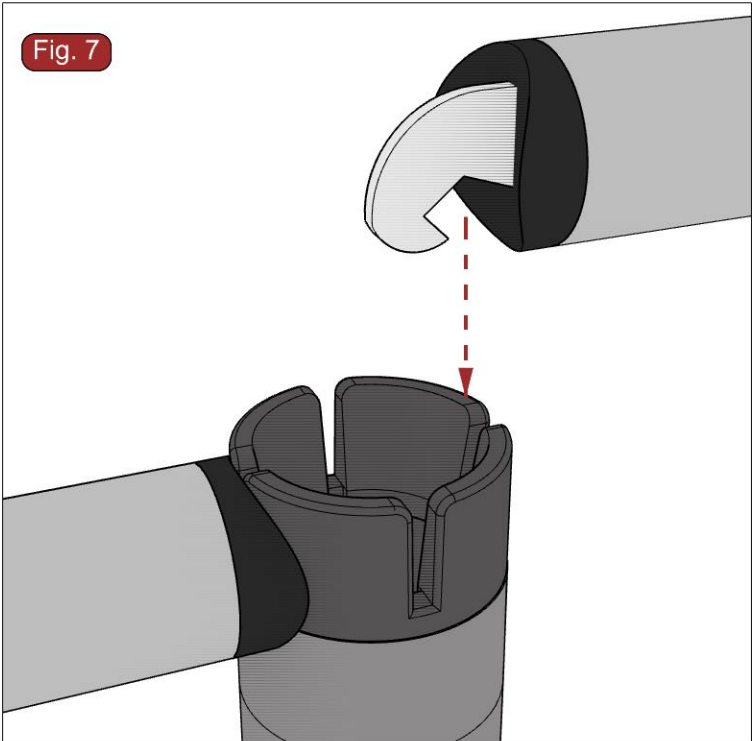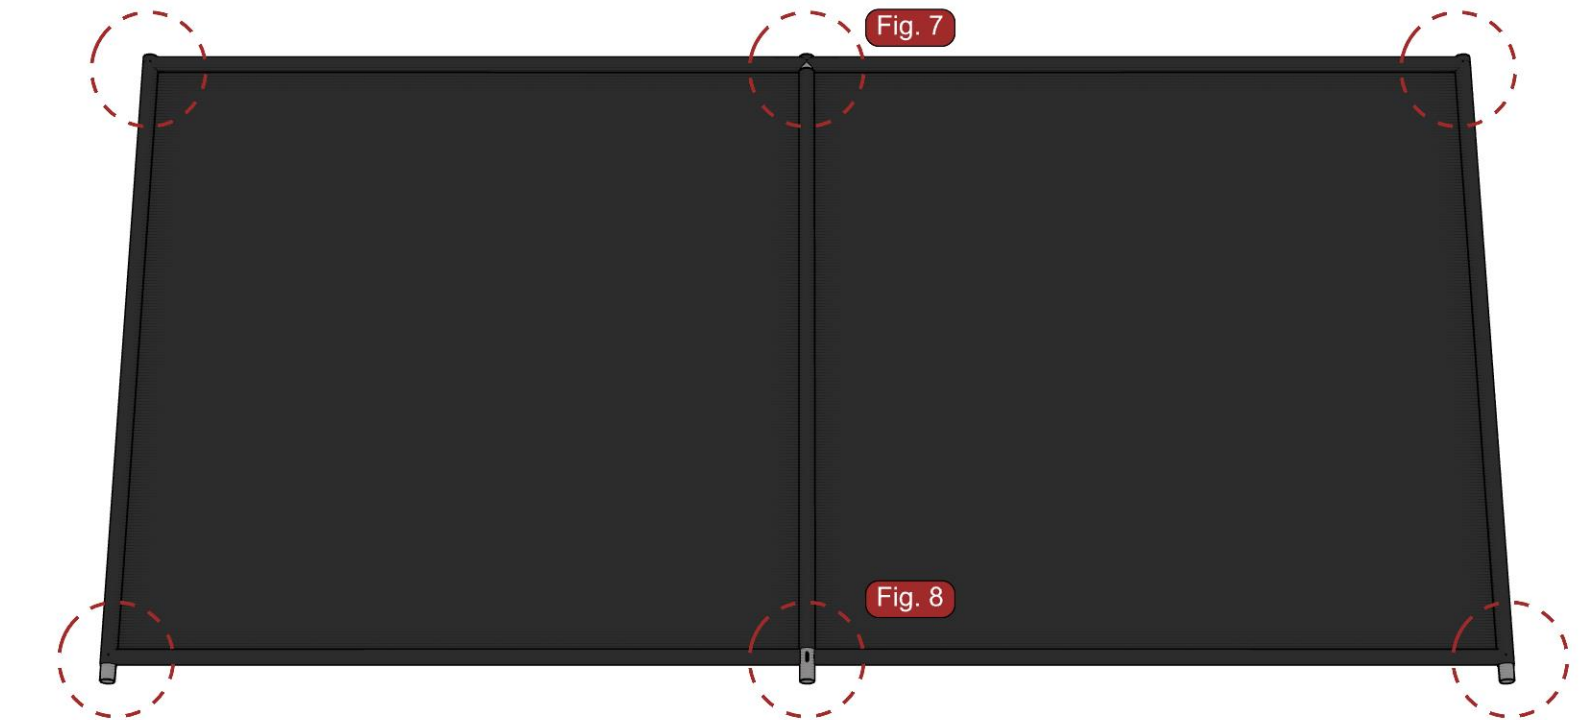


8

Prepare all of your base plates. Use the provided screws to fasten the 2" pin to your base plate. Pins are generally attached through the center hole in the plate, but other holes can be utilized.

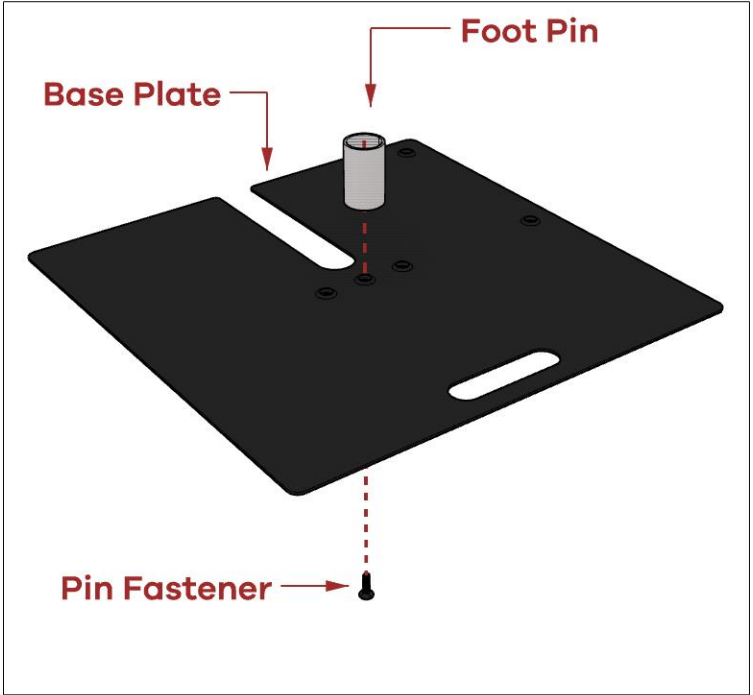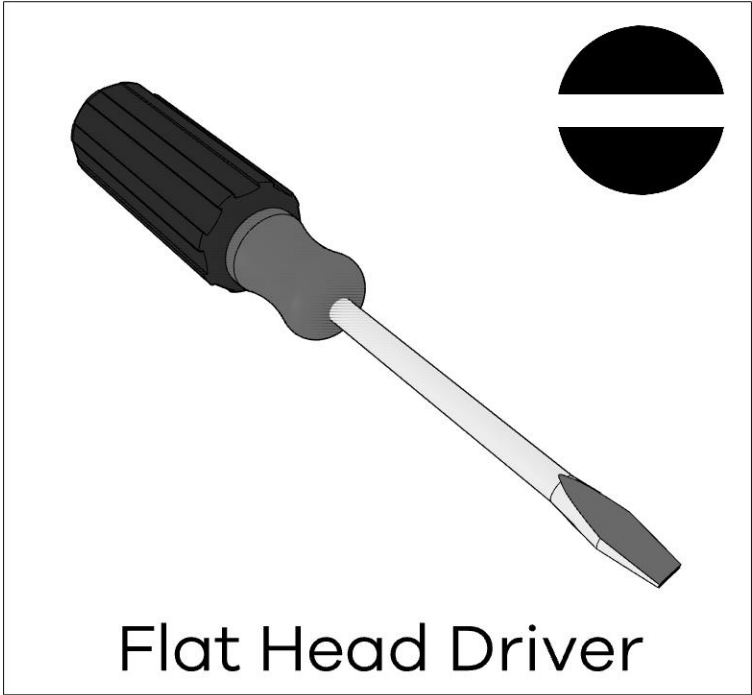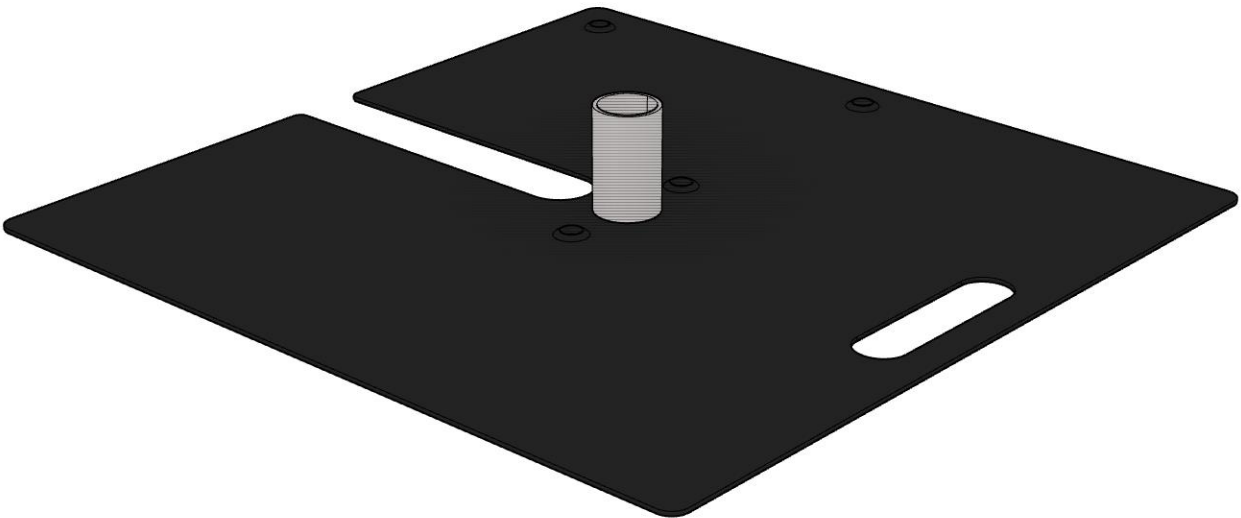

9

Insert your base plate assemblies into the bottoms of the vertical upright poles. Ensure that the pins are fully inserted, all the way to the base plate.

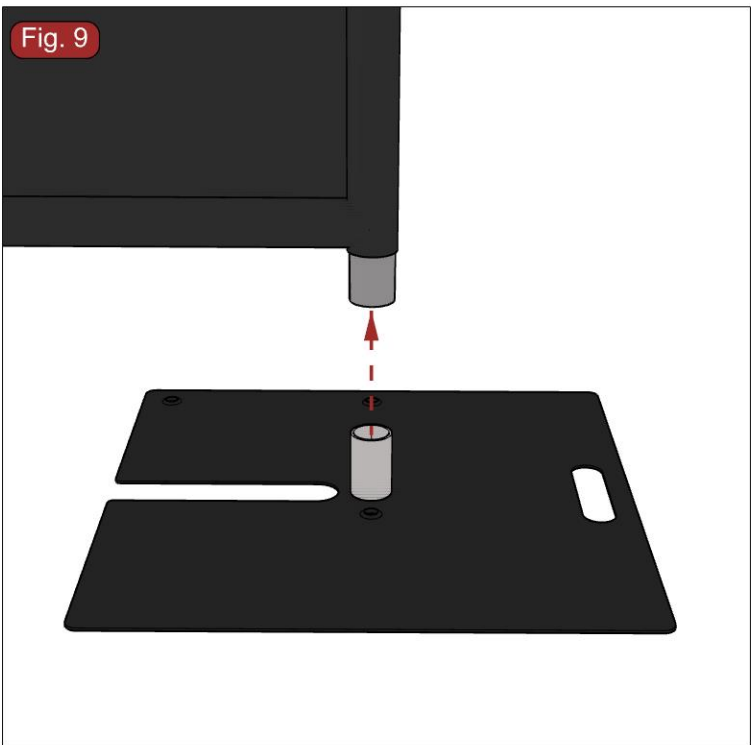


10

While the quick wall has its back to the ground, load about $\frac{1}{4}$ of the main fabric cover onto the assembly.



To avoid smudges and dirt buildup on your fabric, always install the fabric using nitrile gloves.

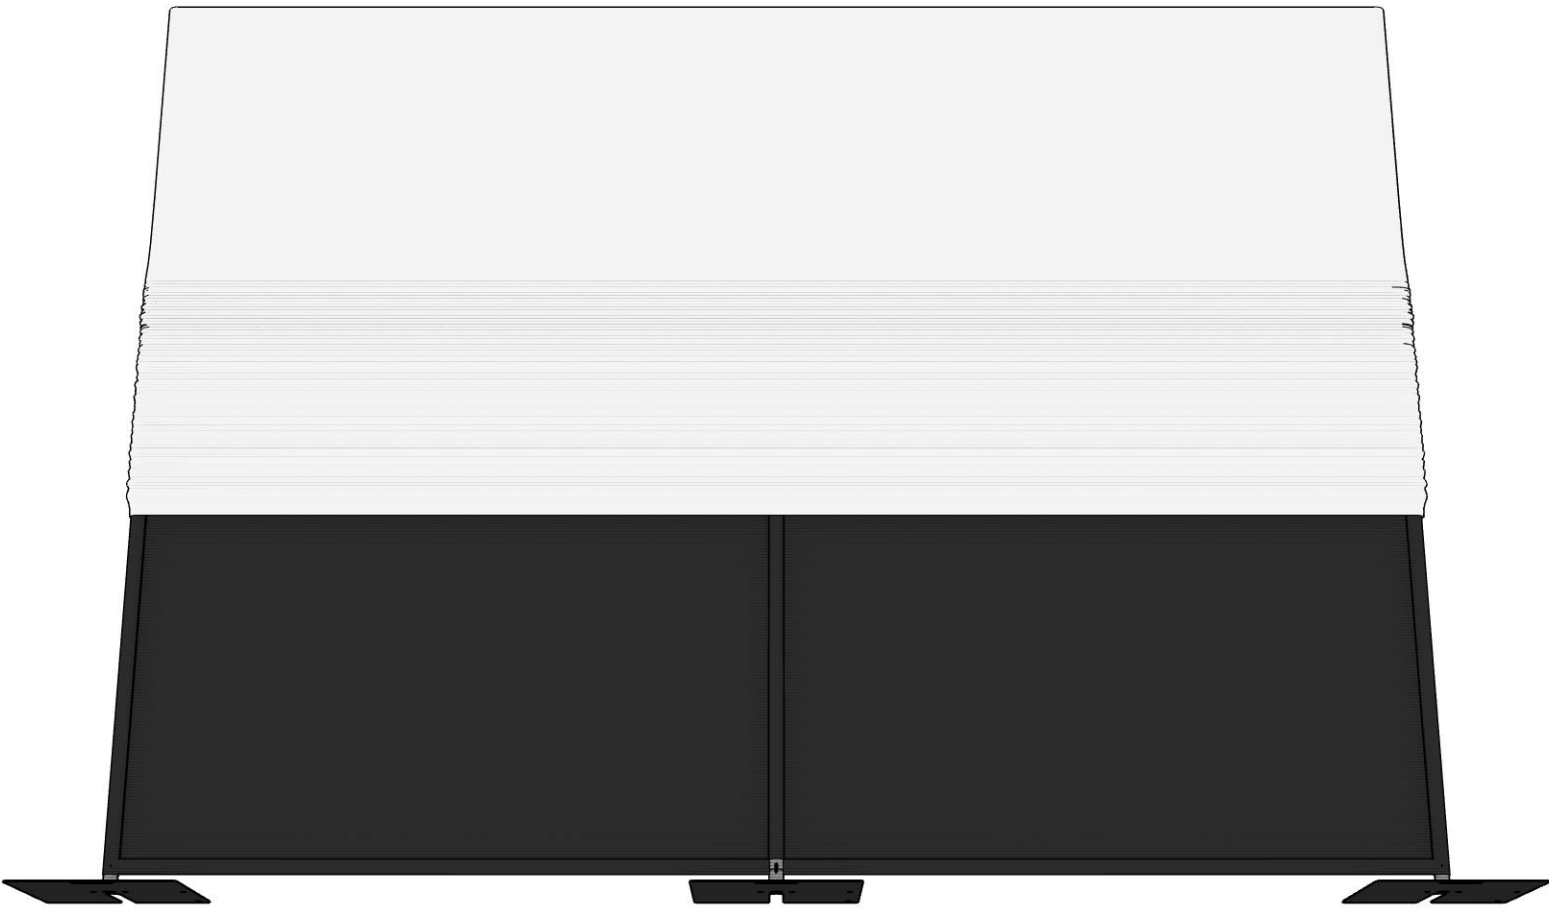


11

With a team member at each upright, lift your Quick Wall into its intended vertical position.

PRO TIP

Nominate a team leader to guide the speed of lifting.

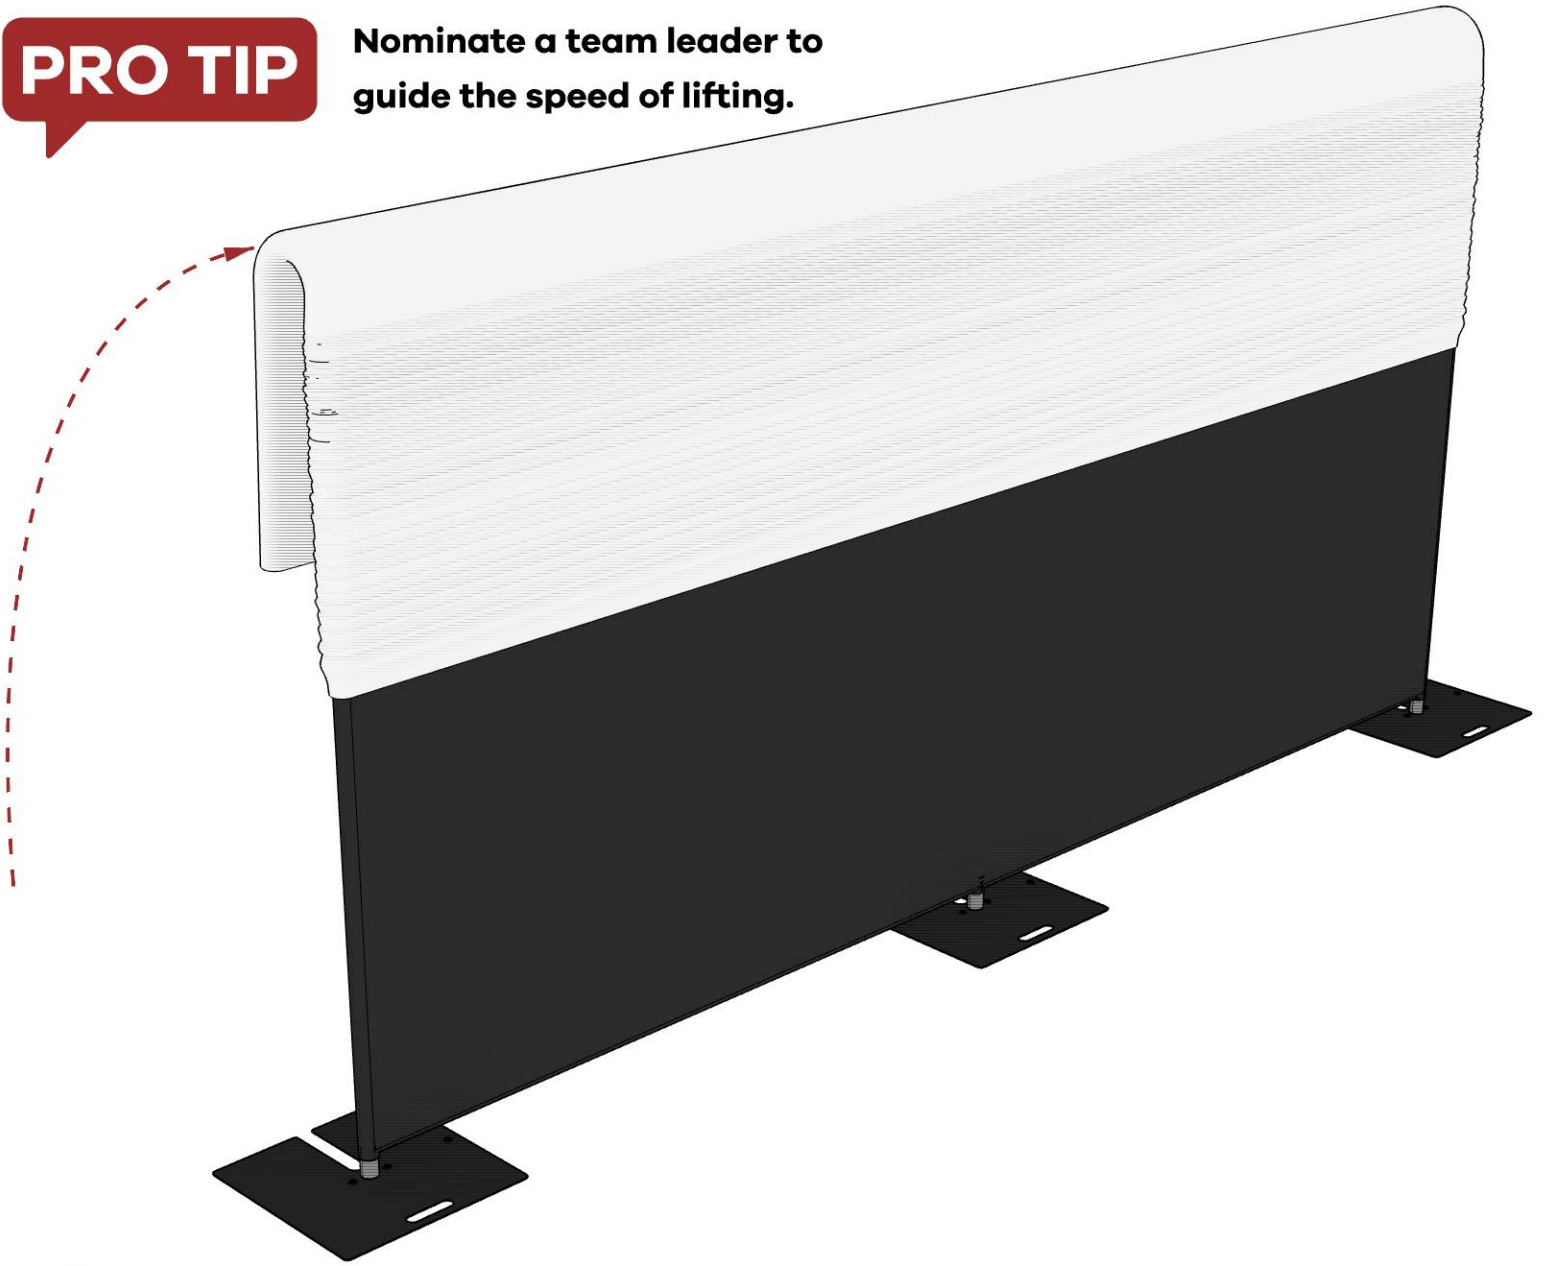

When lifting the quick wall assembly, lift all the vertical uprights at the same speed to avoid twisting the frame. Uneven lifting can damage components.


12

Adjust the pipe cover and liner if necessary. Pull the remaining portion of the fabric cover onto the Quick Wall.




13

On the bottom of the cover, fasten the zipper enclosure between each upright. Adjust the fabric to remove wrinkles.

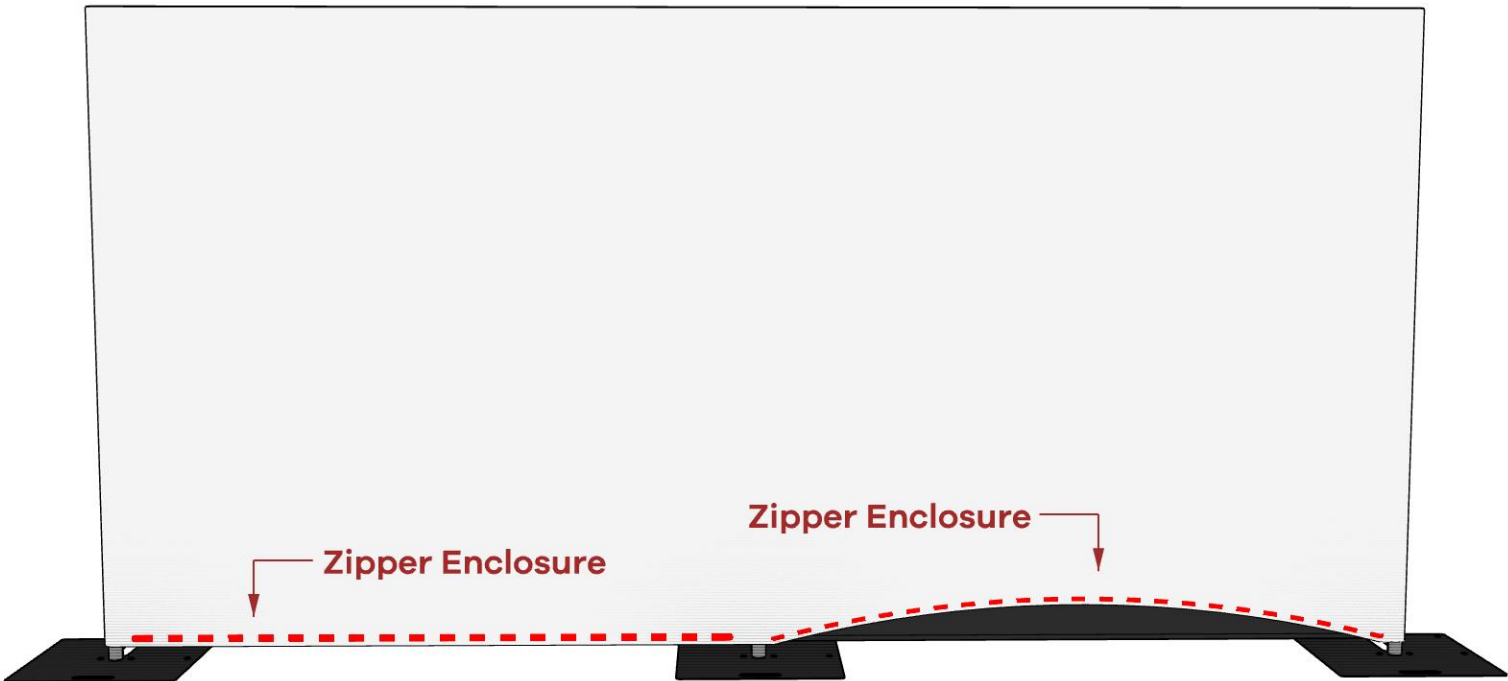

14

Adjust your base plates so that they align as much as possible. This will help keep the Quick Wall flat, and avoid unsightly kinks or bends in the wall.

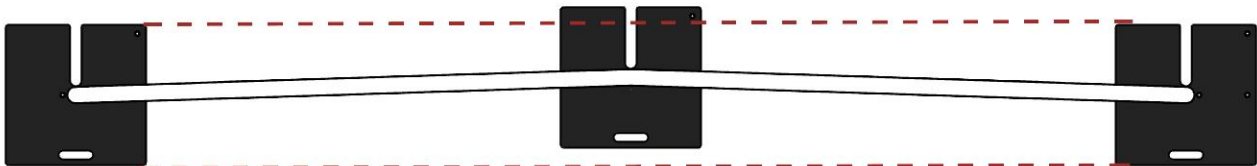

Unaligned plate causes bend in wall



Properly Aligned Base Plates

PRODUCT INSTALLATION


Double-sided Quick Wall - UNLINED

1

Establish a clean working environment. Consider using drop cloths or plastic sheeting to maintain a debris-free surface.

PRO TIP



Carpeted floors work well for setup

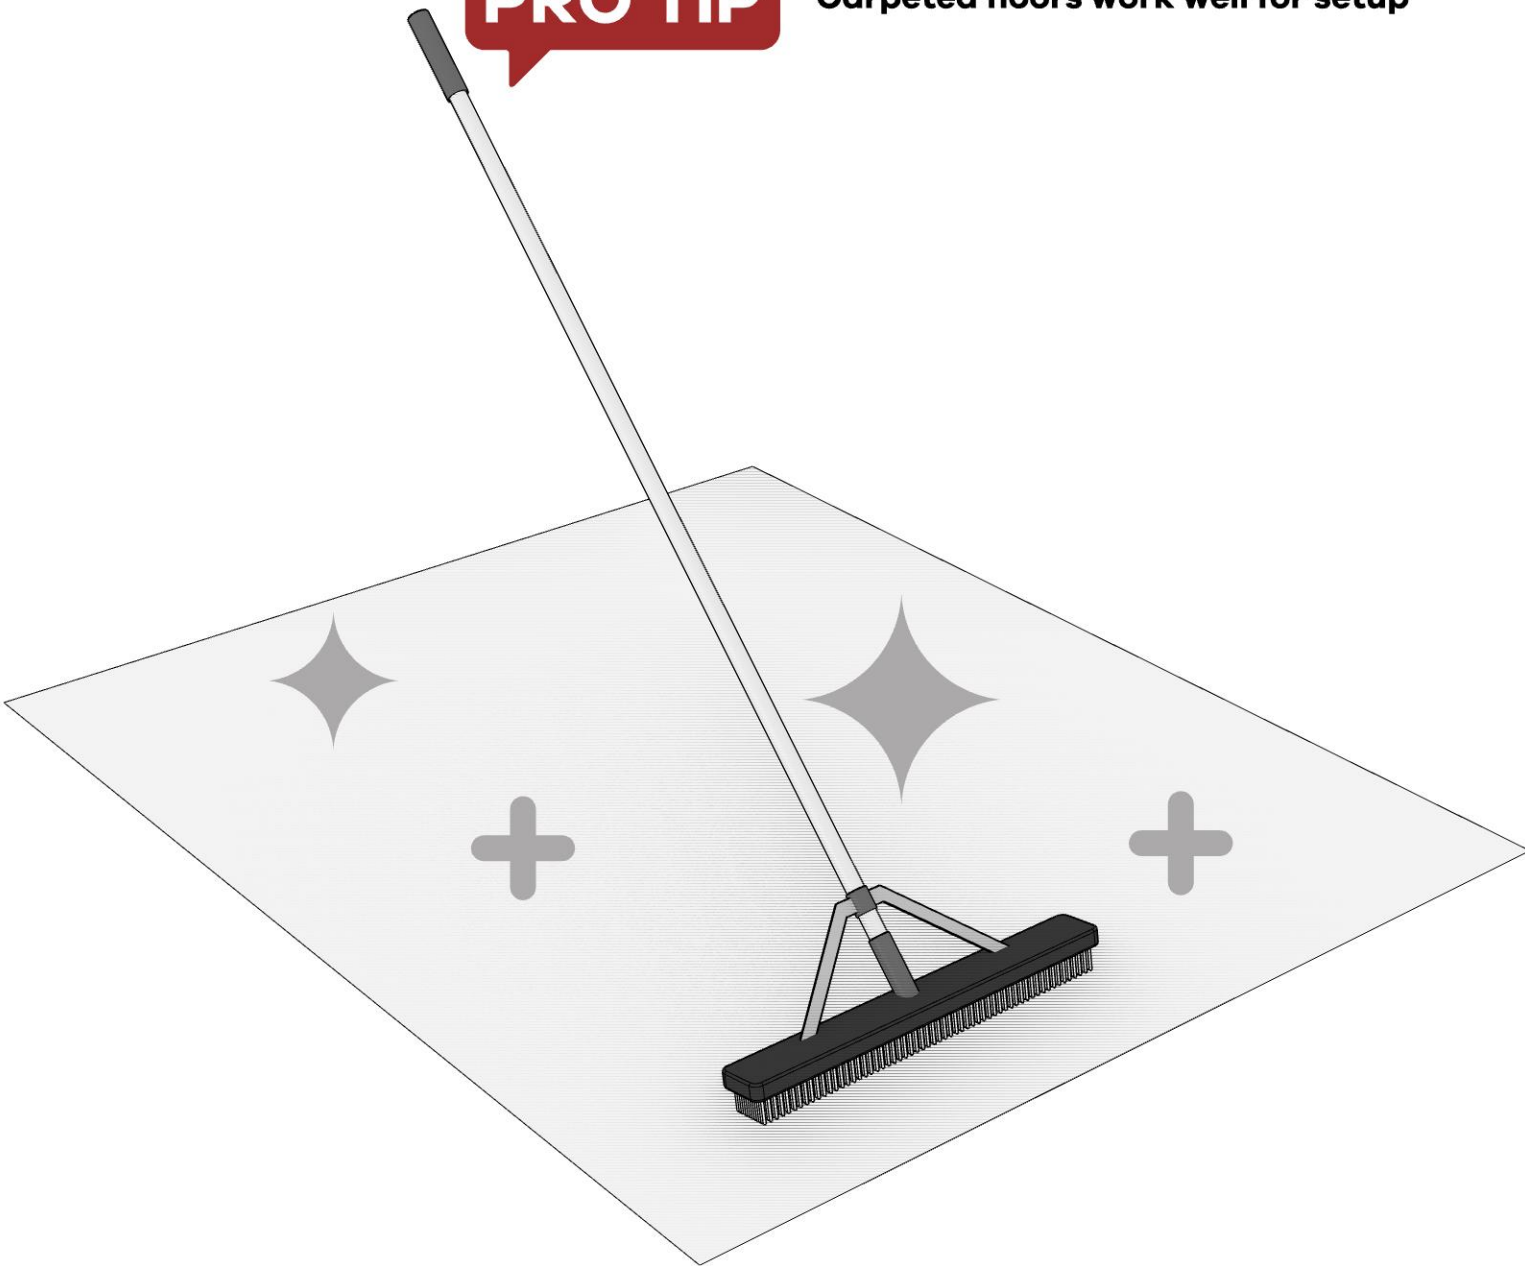

2


Familiarize yourself with parts of your pipe and base kit for your quick wall. **Additional parts are shown on the following page (3).**

Base Plate Assembly

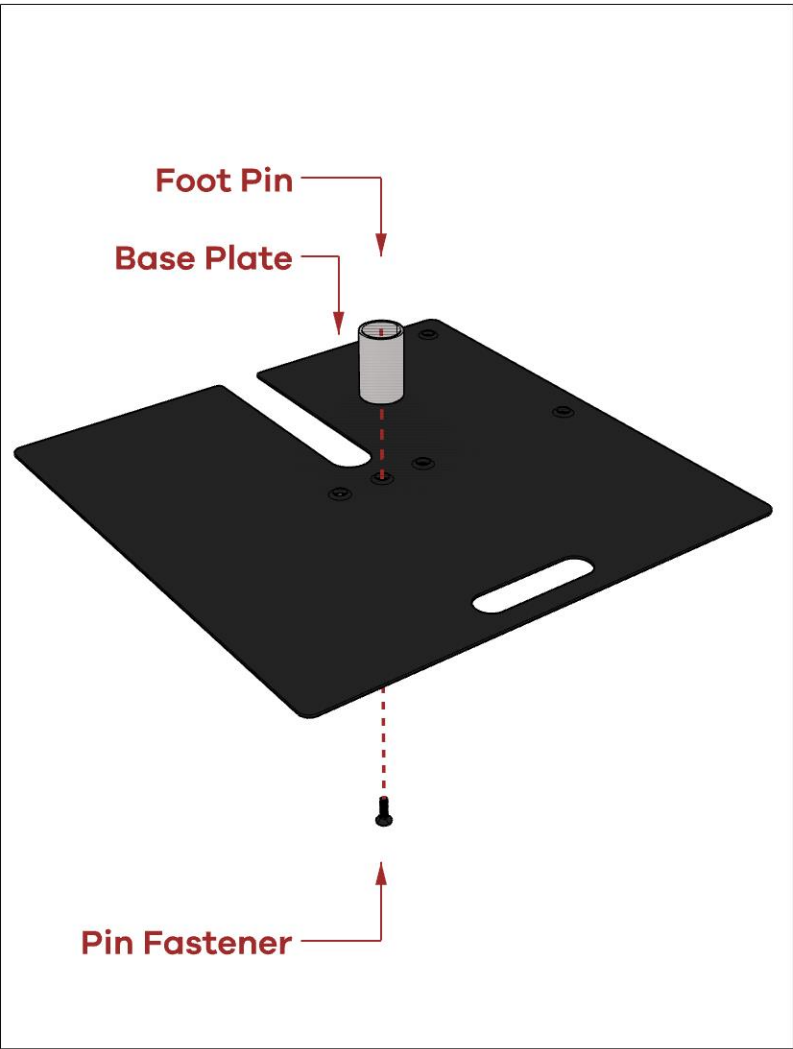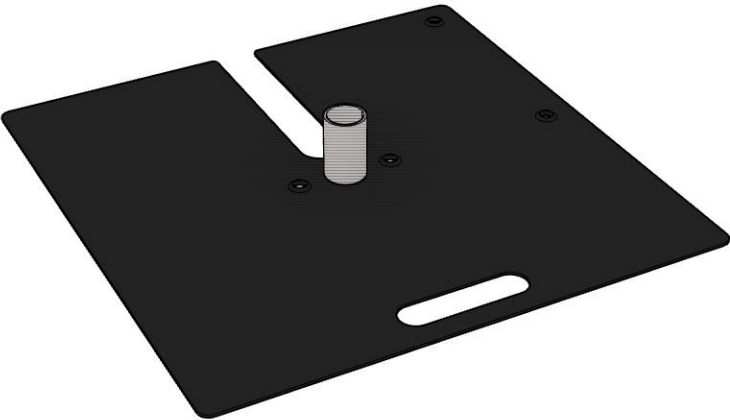


2

(CONTINUED FROM PAGE 10) Familiarize yourself with the parts of your pipe and base kit.

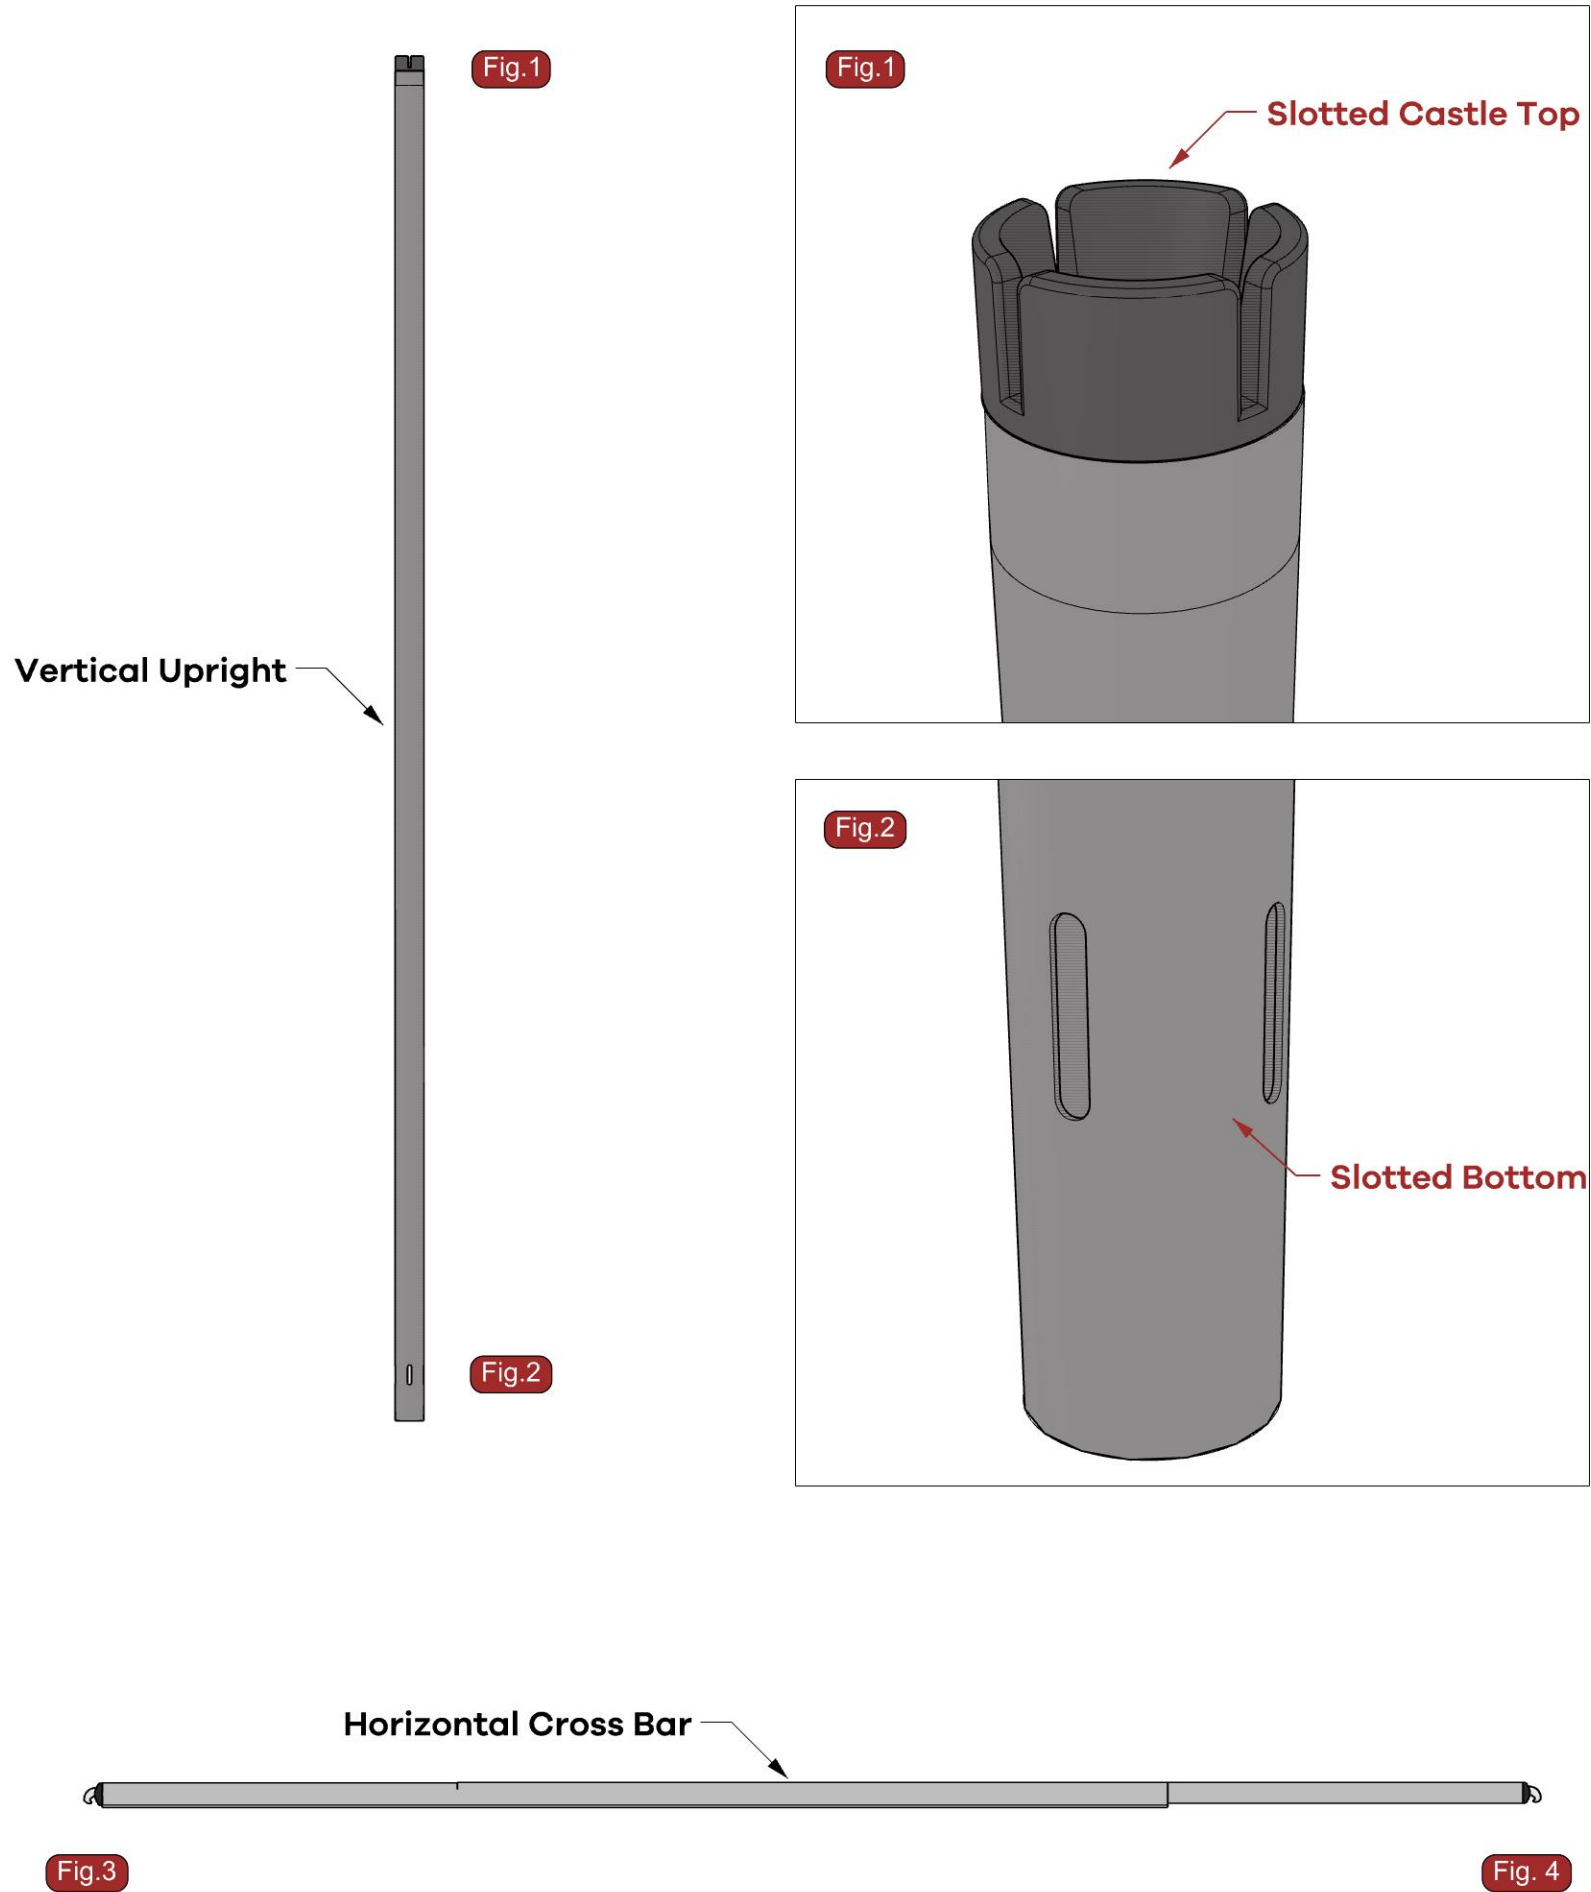


Cross bars use a button stop system to adjust their widths to the desired size. Make sure that your cross bars are set to the correct width before installing the frame and fabric assembly.

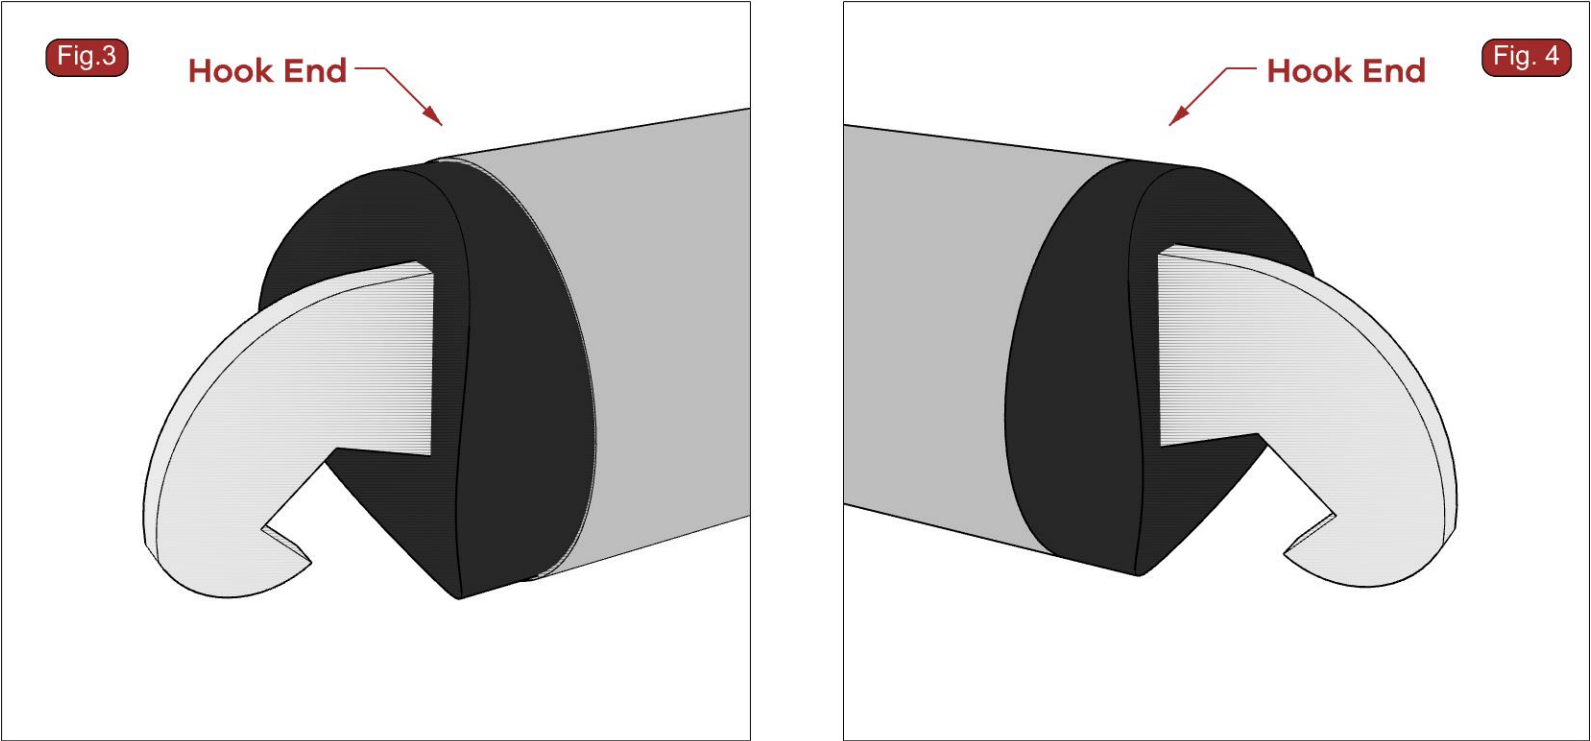




3

Lay your frame components out on the ground close to each other. **Ensure that your cross bars are the correct length by using the button stop system.**

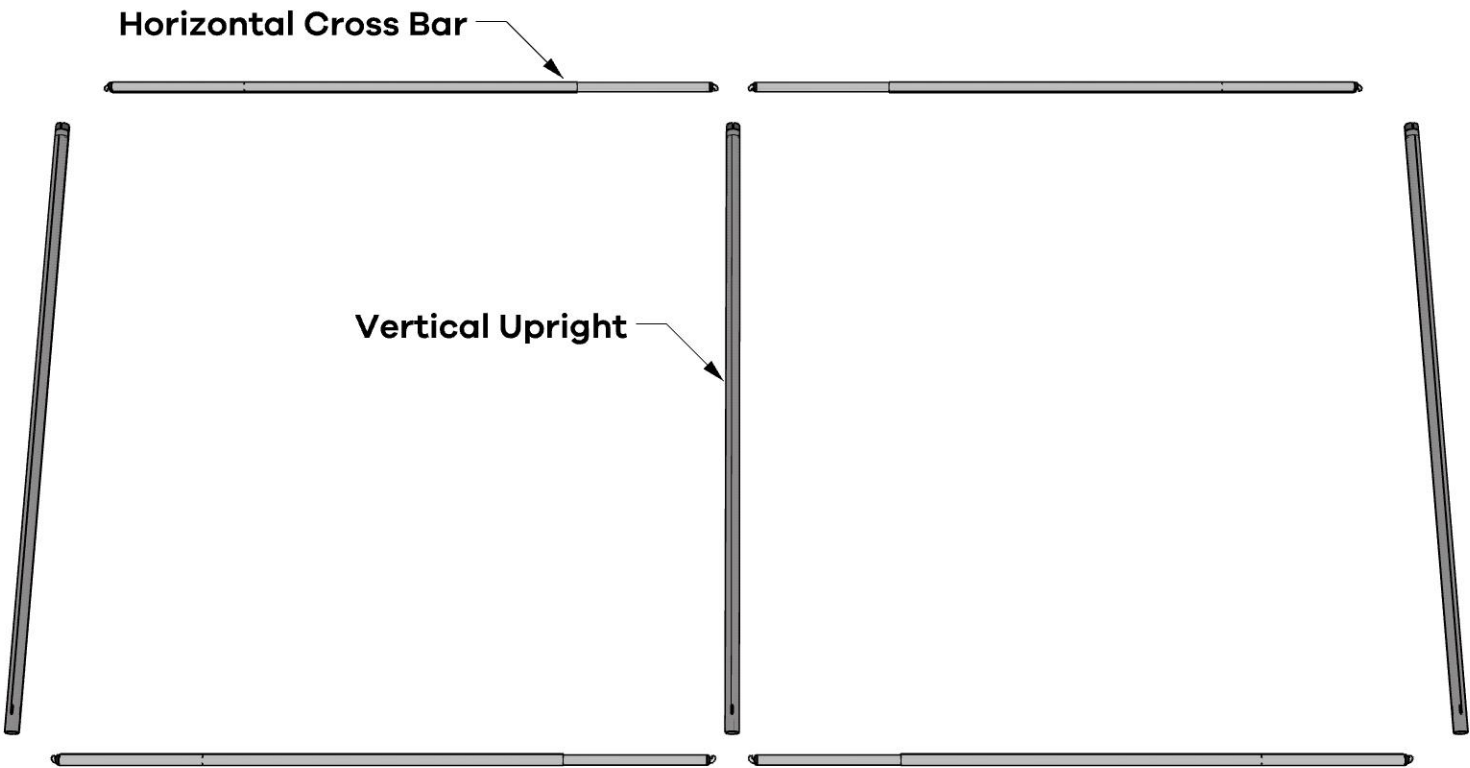



4

Connect your horizontal cross bars to your vertical uprights. **Hooks on the ends of horizontal cross bars should be facing away from the outside edge of the quick wall.**

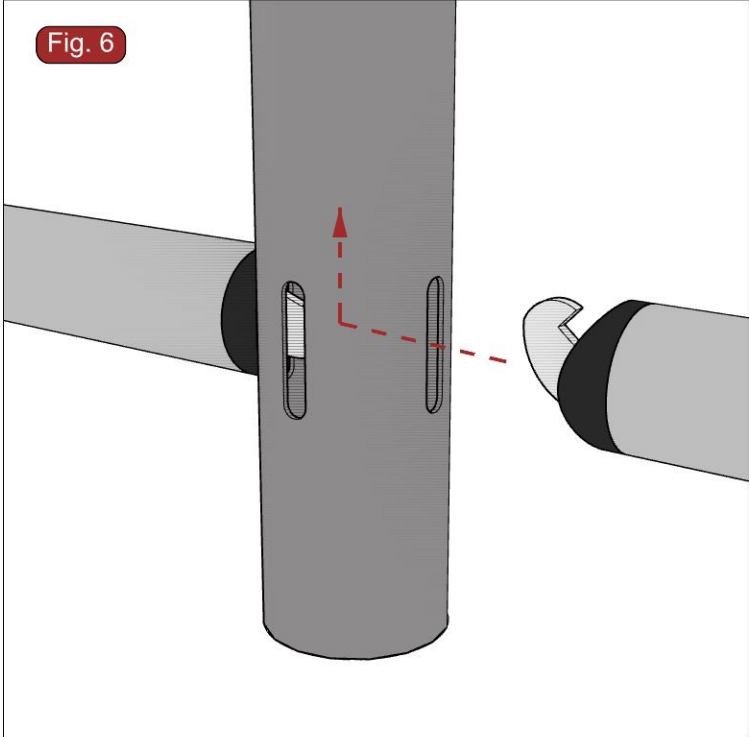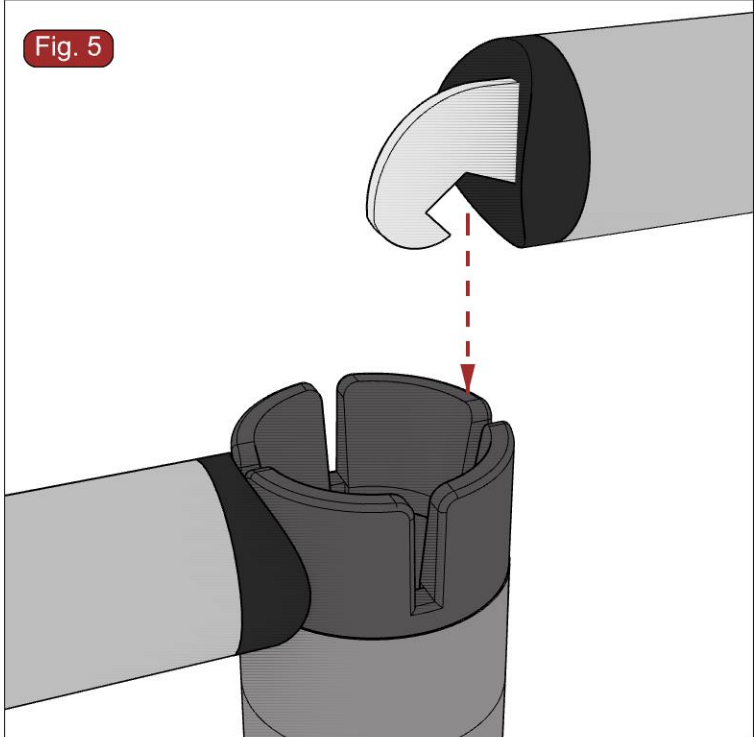
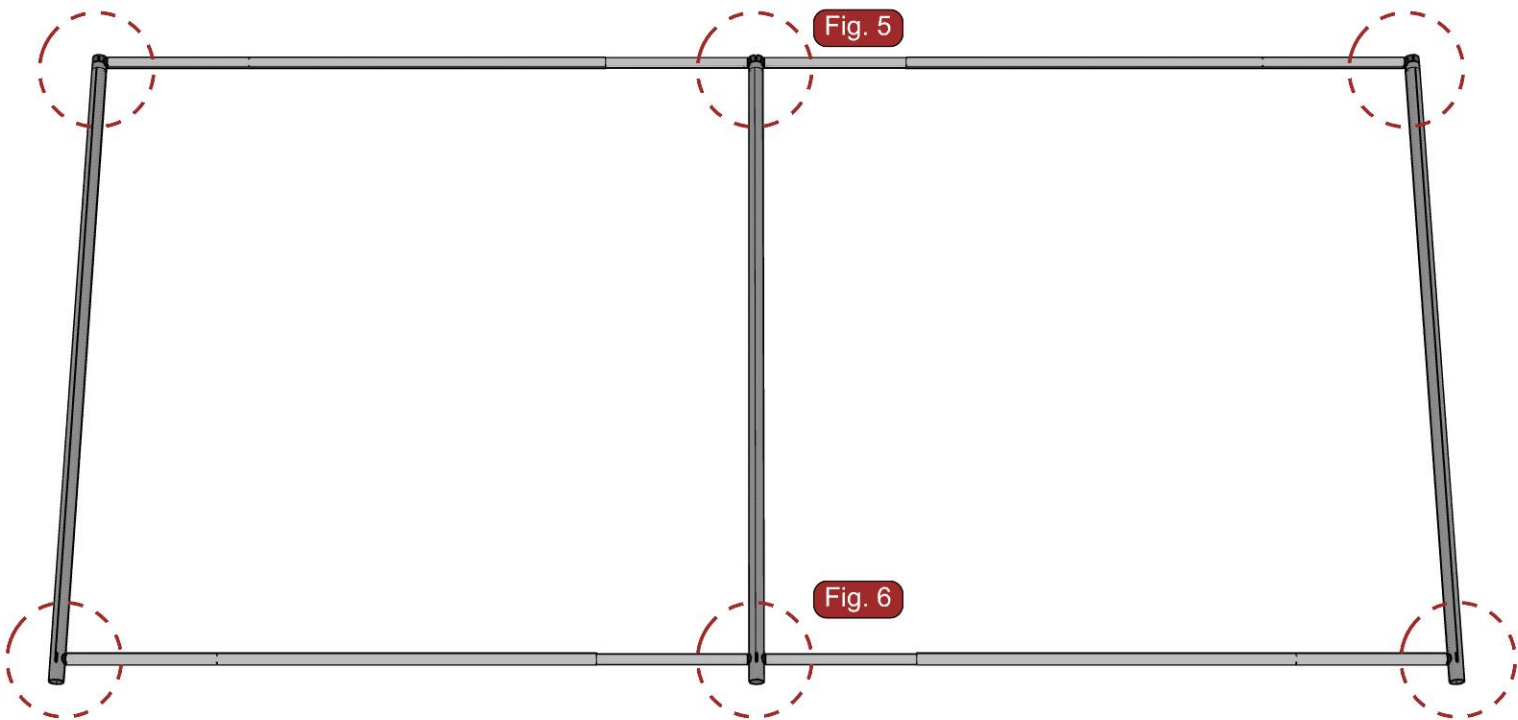


5

Prepare all of your base plates. Use the provided screws to fasten the 2" pin to your base plate. Pins are generally attached through the center hole in the plate, but other holes can be utilized.

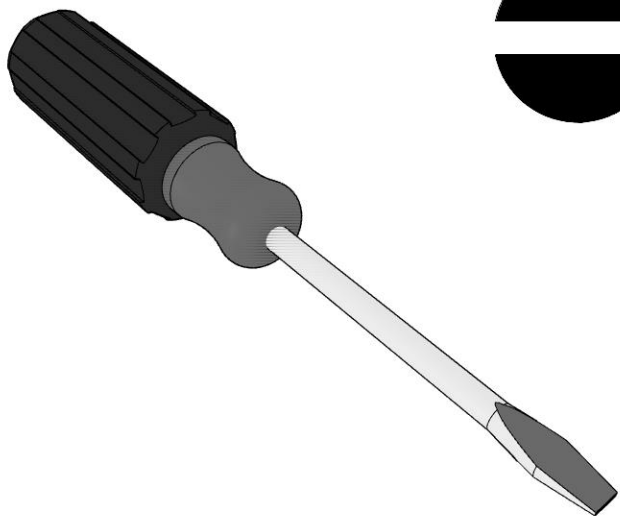
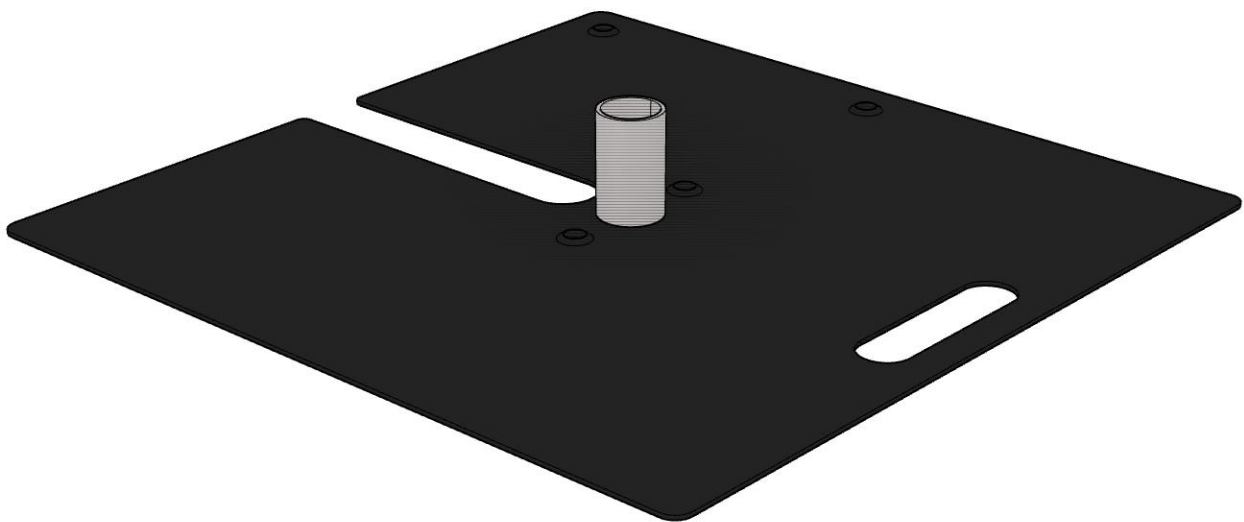


Flat Head Driver

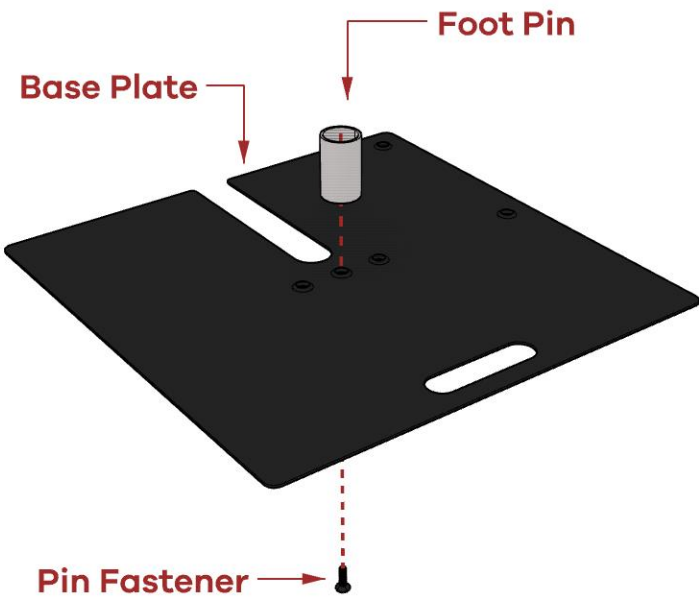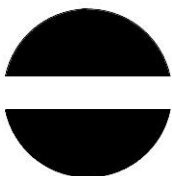

6

Insert your base plate assemblies into the bottoms of the vertical upright poles. Ensure that the pins are fully inserted, all the way to the base plate.

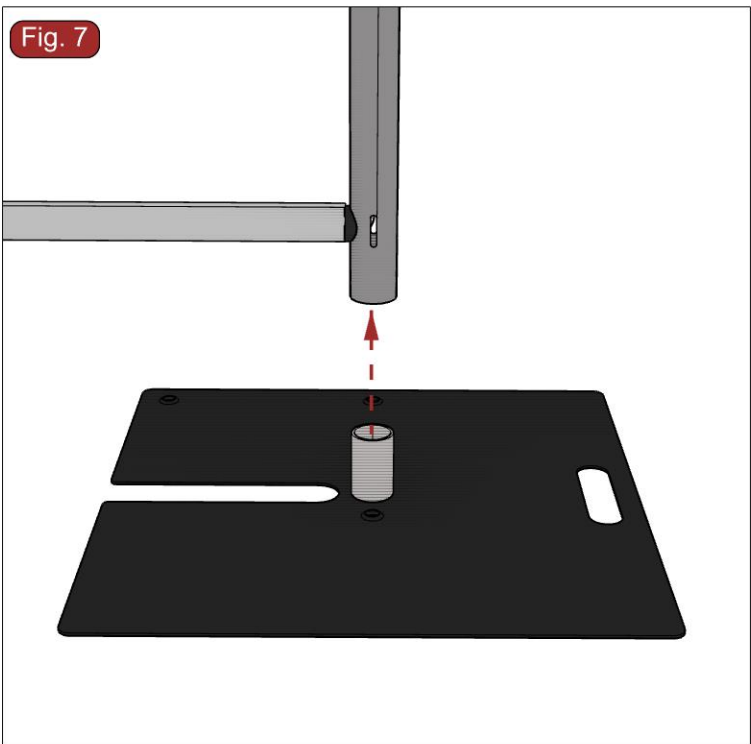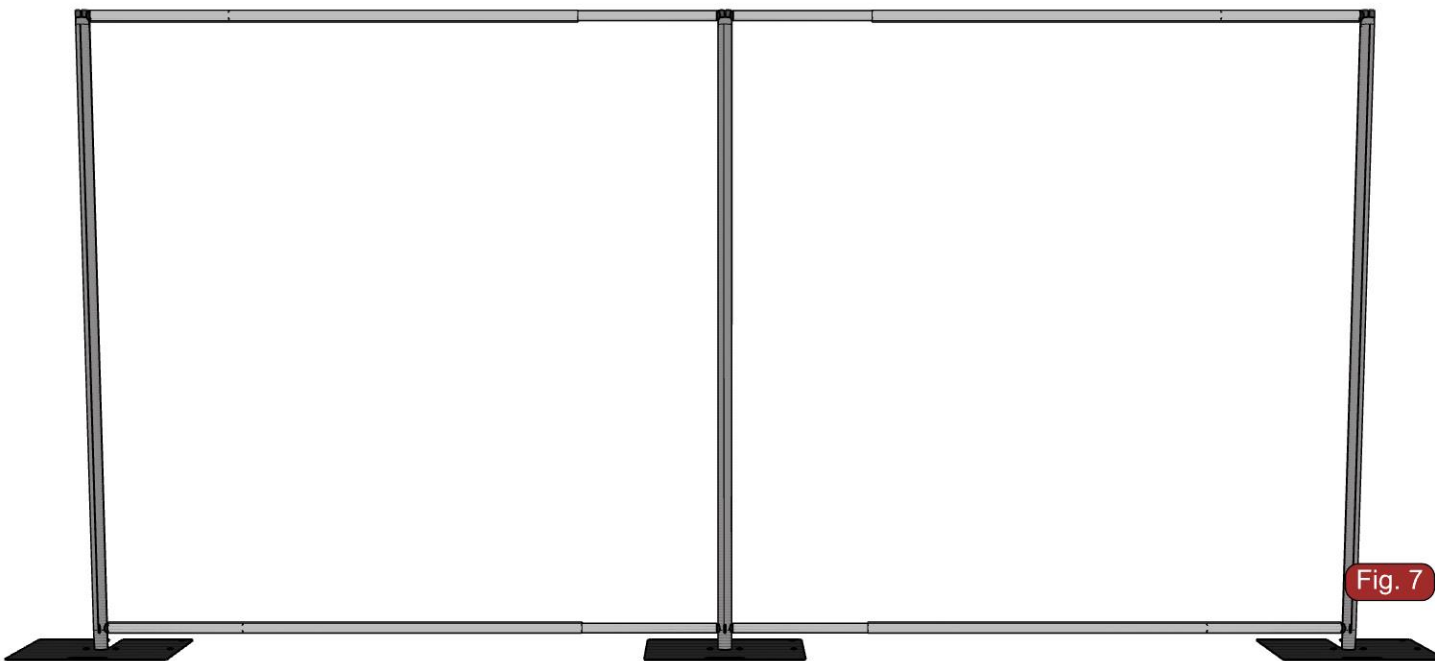


7

While the quick wall has its back to the ground, load about $\frac{1}{4}$ of the main fabric cover onto the assembly.



To avoid smudges and dirt buildup on your fabric, always install the fabric using nitrile gloves.

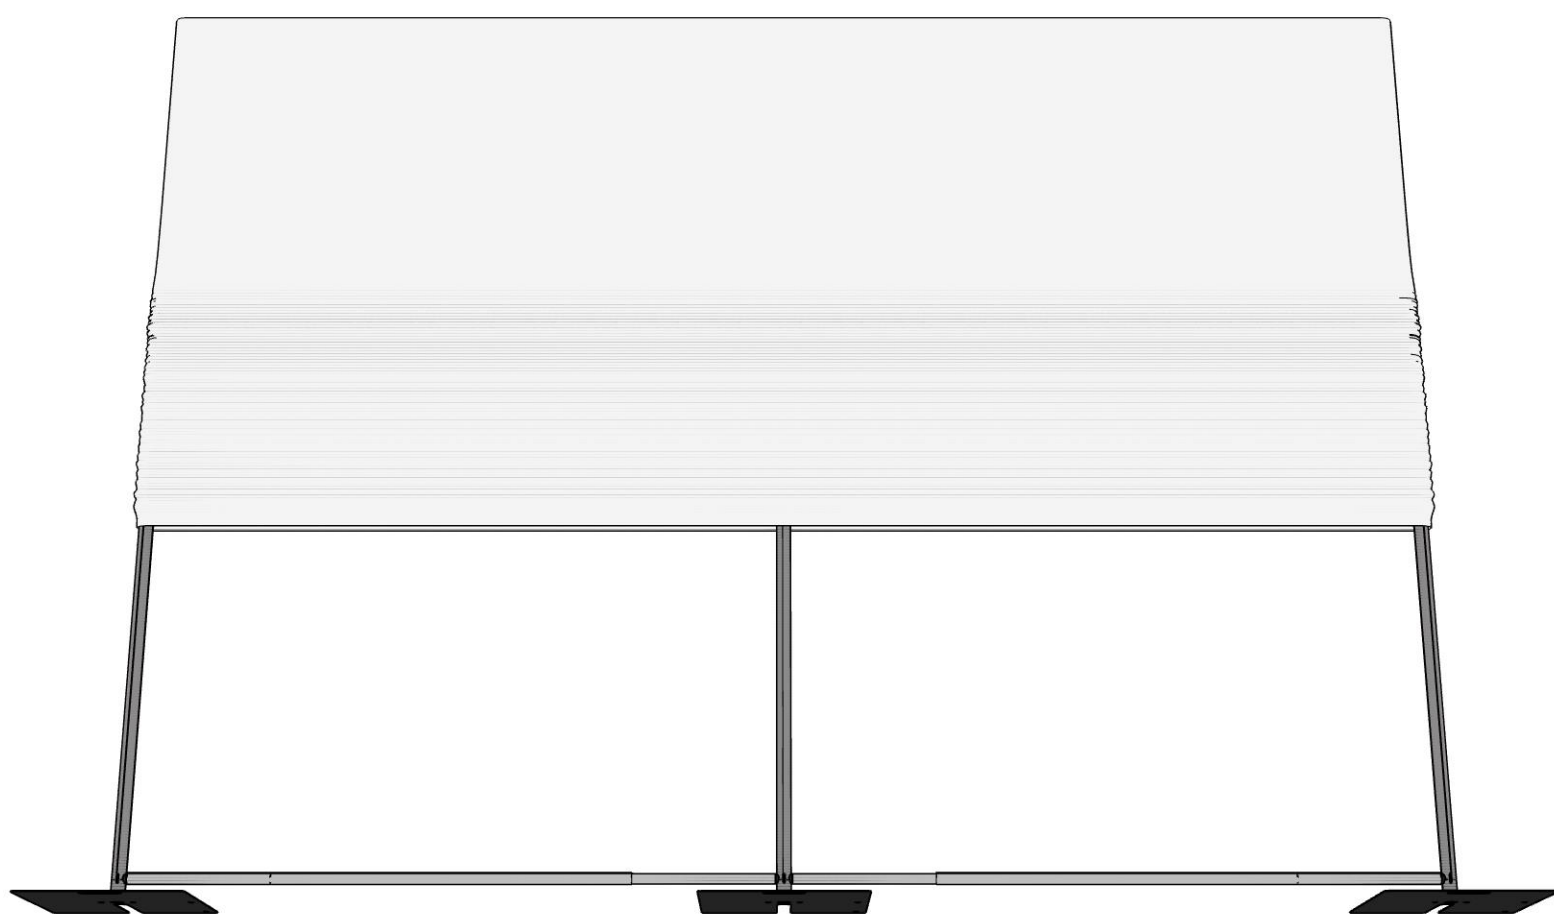


8

With a team member at each upright, lift your Quick Wall into its intended vertical position.

PRO TIP


Nominate a team leader to guide the speed of lifting.

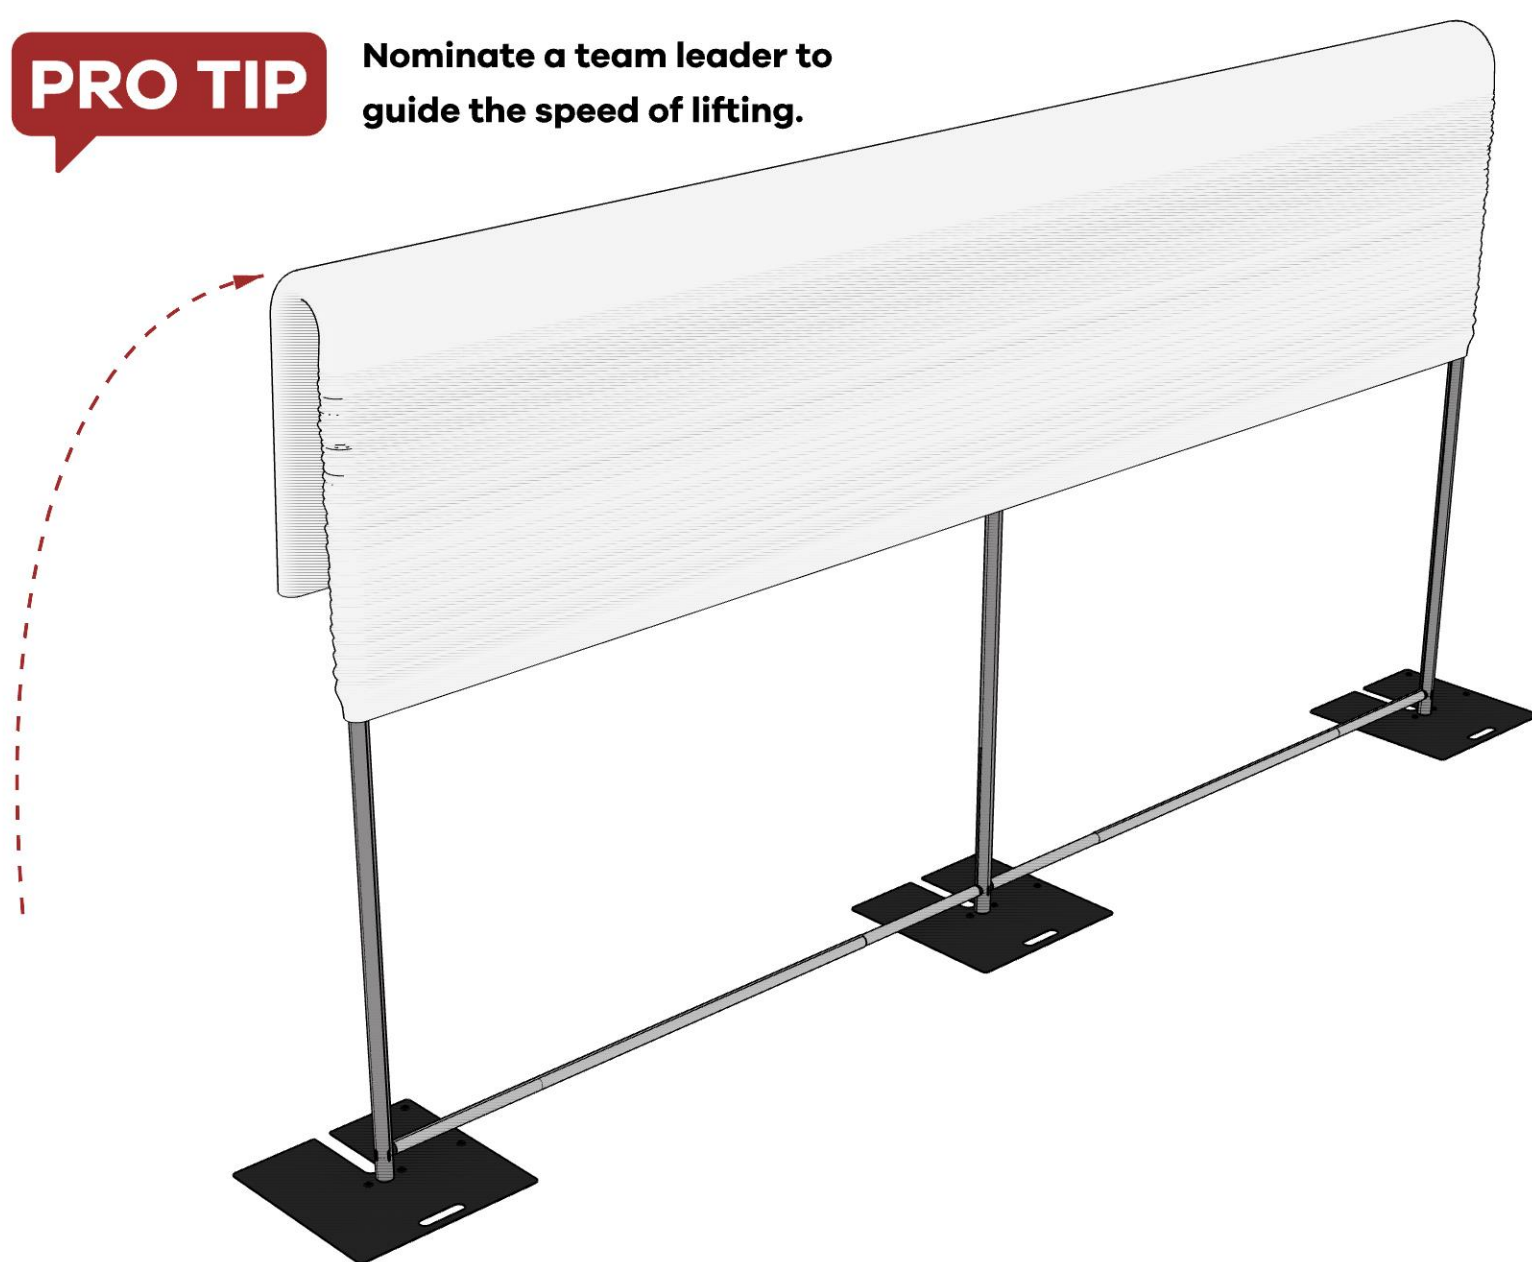

When lifting the quick wall assembly, lift all the vertical uprights at the same speed to avoid twisting the frame. Uneven lifting can damage components.


9

Adjust the pipe cover and liner if necessary. Pull the remaining portion of the fabric cover onto the Quick Wall.

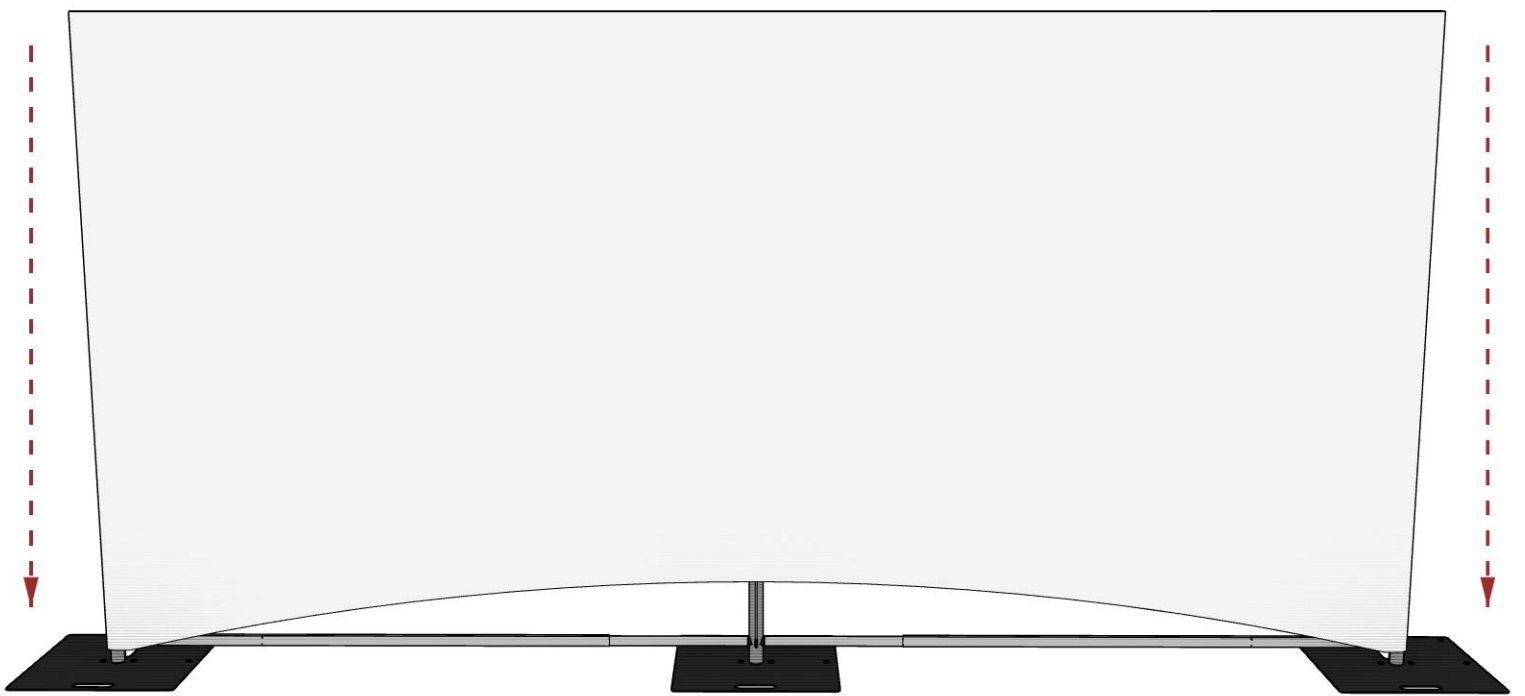



10

On the bottom of the fabric cover, fasten the zipper enclosure between each upright. Adjust the fabric to remove wrinkles.

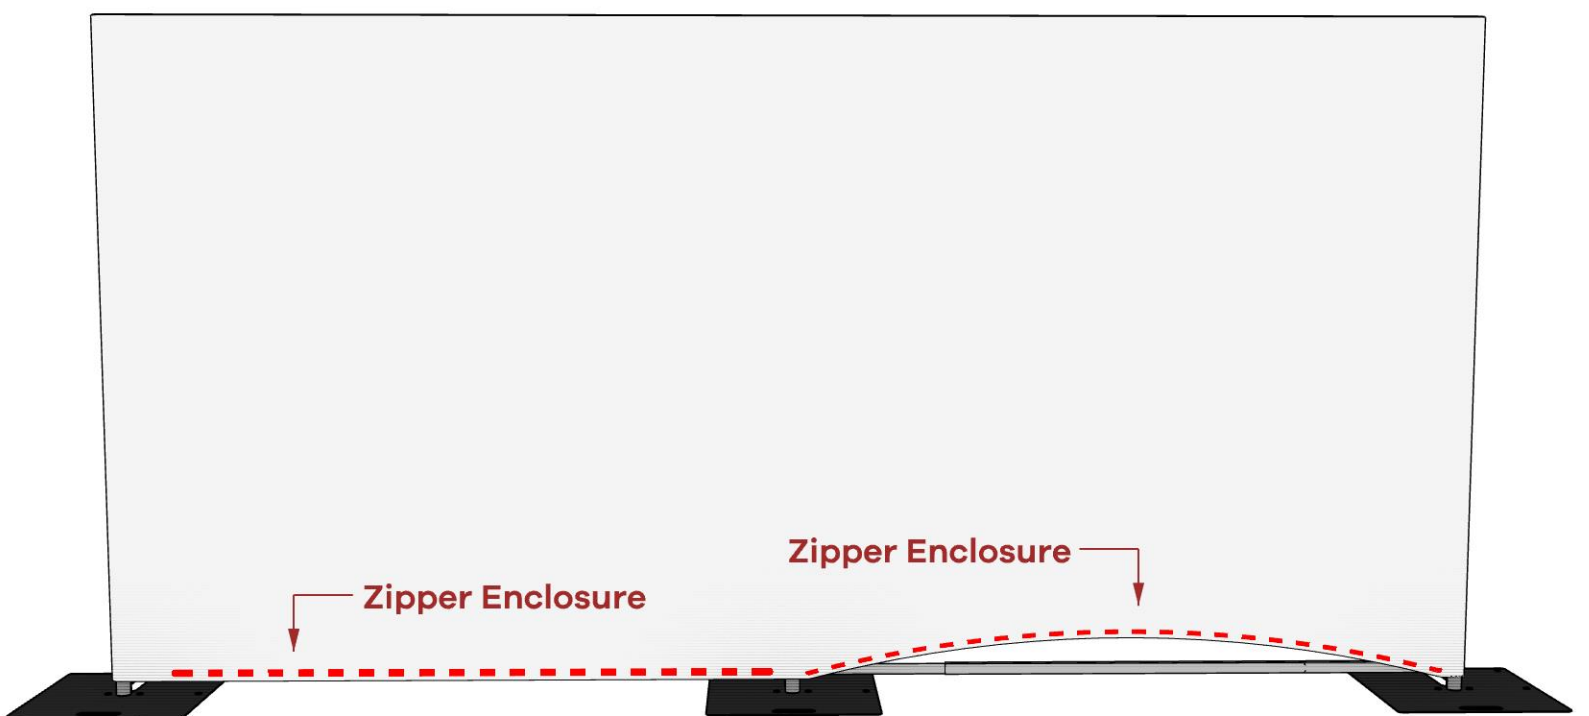

11

Adjust your base plates so that they align as much as possible. This will help keep the Quick Wall flat, and avoid unsightly kinks or bends in the wall.

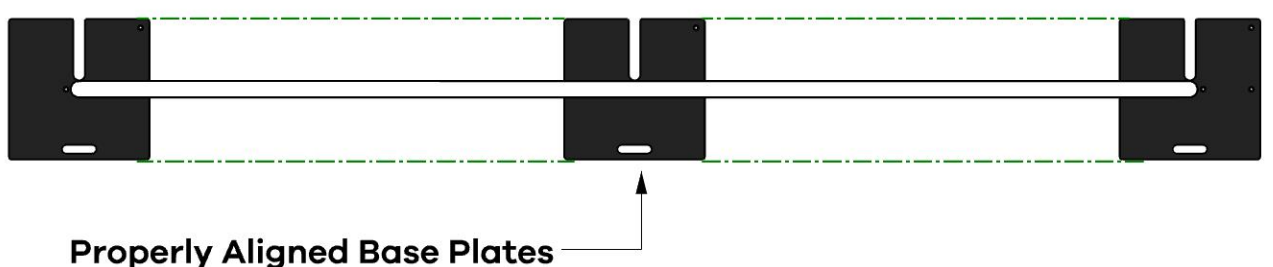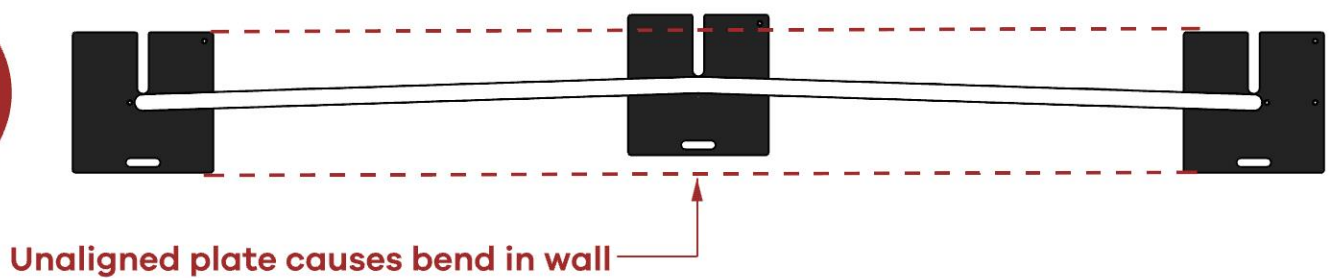

FABRIC CARE

UNIVERSAL STRETCH FABRIC (USF)

Storage Notes and Methods

Qualified orders include a cloth drawstring bag, which is ideal for long-term storage. When storing your fabric in a sealed container, like the plastic bag the skin arrived in, the fabric must be completely dry to avoid mold or mildew growth.

If your product includes any metal parts such as gate ring, rigging supplies, or frames, be sure to remove them prior to storage. Wrinkles can result from fabric storage. Almost all wrinkles from storage will stretch out once the fabric is installed correctly. If deep wrinkles persists, place fabric in a dryer on low heat for a few minutes.

Cleaning and Dusting

Light clean: Fingerprints from installation without gloves are the main culprit of a dirty screen. Follow the setup instructions carefully, and always use nitrile gloves when handling fabric skins. To remove light stains, use hot soapy water and dab the area clean.

Deep clean: Machine wash fabric on delicate with detergent and Oxiclean®. Machine dry on low heat, regularly checking for completion. IFR products dry quickly. All USF products will retain IFR (Inherently Flame Retardant) certification after repeated washes.

Dusting: We understand that many of our products may be left up over long periods of time. Dust will inevitably stick to the surface and collect. To remove dust on fabric, use a clean object to lightly bat the back surface. Start at the center of the fabric and move towards the outer edges.



DO NOT OVER DRY. Extended heat will damage the spandex in the fabric material.



DO NOT USE BLEACH or bleach-based cleaners on USF fabric. Bleach will damage the spandex in the fabric.

Product Warranty

Because we believe in our products and the manufacturing quality, we include a 1-year warranty with every product we sell. For a complete review of our warranty policy, please visit our website:
stretchshapes.net/product-guarantee