

# QUICK WALL

## INSTALLATION & MAINTENANCE



THE FASTEST, MOST VERSATILE SOLUTION FOR  
TEMPORARY WALLS AND BACKDROPS



**MOSS**  
WE ARE PLACE MAKERS™

**Install questions?**  
**Contact us. We're here to help**  
**you succeed!**



**MOSS**

---

**WE ARE PLACE MAKERS™**

**888.370.0202**

## Proper Handling

To avoid smudges, always install the fabric wearing the gloves provided. Even clean hands can leave residue on the fabric. Consider using drop cloths or plastic sheeting to maintain a clean work environment as needed.

## Storage

**Fabric:** Qualified orders include a cloth drawstring bag, which is ideal for long-term storage. When storing your fabric in a sealed container, like the plastic it arrived in, the fabric must be completely dry to avoid mold or mildew.

If your product includes any metal parts such as gate rings, rigging supplies, or frames, be sure to remove them prior to storage.

Wrinkles can result from fabric storage. Almost all wrinkles from storage will stretch out once the fabric is installed correctly. If deep wrinkles persist, place in a dryer on low heat for a few minutes. **DO NOT OVER DRY.** Extended heat will damage the spandex in the material.

## Cleaning

**Light:** Fingerprints from installation without gloves is the main culprit of a dirty Quick Wall. To remove light stains, use soapy hot water and dab the area clean. We've seen a variety of stains lifted from our products with minimal effort.

**Deep:** Machine wash fabric on delicate with detergent and Oxiclean®. Do not use any bleach-based products, as it will damage the spandex in the material. Machine dry on low heat regularly opening the dryer to check for completion. Take precautions to ensure you **DO NOT OVER DRY** as this will damage the spandex in the material. This product will dry very fast. All of our products will retain IFR (Inherently Flame Retardant) certification event after repeated washes.

**Dusting:** We understand that many of our products may

be left up over long periods of time and collect dust. To remove dust on fabric, use your hand or a clean object to bat the surface, starting in the center and moving towards the edge, until the dust falls away.

## Warranty

For a complete review of our warranty, please visit our website: <https://www.mossinc.com/terms-and-conditions>

## Included Accessories



NITRILE GLOVES



STORAGE BAG

## Recommended Tools



TAPE MEASURE



FLAT HEAD SCREWDRIVER

# Installation


## 1. Lay Out Fabric

Prior to handling the fabric, we recommend wearing the provided nitrile gloves to avoid any finger smudges. Additionally, prepare a clean work environment for the fabric, if necessary, lay out drop cloths or plastic sheeting. Once a clean environment is established, evenly lay out the fabric skin face down, with the seams facing up. If printed, consider orienting the bottom of your graphic closest to the Quick Wall's final upright position.



## 2. Insert Horizontal Cross Bars

Insert the horizontal cross bars into the pole pockets at the top and bottom of the fabric skin. Cross bars can be identified as the telescoping poles with the metal hooks on the ends. Be sure your crossbars are set to the correct length before inserting into the skin. To adjust crossbar length, depress the button-stop on the bar's side and slide the inner pole in or out as needed to achieve desired length.

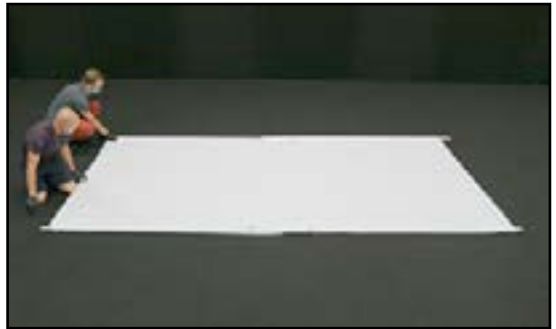

### 3. Insert Vertical Uprights Poles

On each vertical end, insert the vertical upright poles into the fabric's pole pockets.

For printed Quick Walls, ensure the top of the upright pole is inserted towards the top of your graphic.

The top of the upright pole can be identified as the side with the plastic top, while the bottom is open tubing.



### 4. Layout Additional Upright Pole(s)

This step is only applicable if you have a Quick Wall width that requires three or more uprights. Now that you have your outside uprights inserted, lay any remaining uprights on the back of the skin where the crossbars meet.



### 5. Connect Your Frame

Connect your horizontal cross bars to your vertical uprights. With the hooks on the ends of your horizontal cross bars facing away from the outside edge of the Quick Wall, insert the hooks into the corresponding slots on the vertical uprights, repeating for all cross bars.



## 6. Prepare Your Base Plates

Use the included screws to attach the included 2" pin to base plate. Pins are generally attached through the center hole on the base plate, but other base plate holes can be utilized for Quick Wall installations that require unique placement.



## 7. Install Your Base Plates

Once your frame has been completed and your base plates have been prepared, insert your base plates into the bottoms of your vertical upright poles. This is done by holding your base plate on its side, and lifting the bottom of the corresponding vertical upright to align with the base plate pin, then simply insert the base plate and pin assembly into the upright until the pin is completely inside the upright. Repeat for all base plates.



## 8. Adjust Your Fabric Skin

Now that your Quick Wall is completely assembled, adjust the fabric skin as needed by gently massaging to remove any fabric bunching that may have occurred during assembly.



## **9. Stand Your Quick Wall**

Your assembled Quick Wall is ready to stand. With a team member at the top of each upright, lift and walk up your uprights into a vertical position, being sure all team members lift and walk at the same pace to avoid torquing the frame. Pro Tip: For the lift, nominate a lead team member, and have all team members follow your lead's lifting pace.



## **10. Final Adjustments**

Slide base plates back or forward as needed to get your Quick Wall uprights in perfect alignment. If necessary, make final adjustments to your fabric skin to remove any bunching or wrinkles.